



Countries: AUSTRALIA, BRAZIL, CANADA, UNITED STATES, PUERTO RICO, SOUTH AFRICA
Document ID: IK0800066
Availability: ISIS, Bus ISIS, FleetISIS
Revision: 3
Major System: ELECTRICAL SYSTEM
Created: 5/20/2007
Current Language: English
Last Modified: 12/23/2013
Other Languages: [Français](#), [Español](#),
Author: Joe Christopher
Viewed: 1476

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 264	 313

Title: Water In Fuel (WIF) Message Blinking in Dash Message Center at Key On

Applies To: All 2007 to present 4000, 5000, 7000 and 8000 with International Engines

DESCRIPTION

The Water in Fuel Message will flash six (6) times and then will stay on solid when the ignition key is turned on with out the engine running. This is normal operation and the message will go away once the engine is running. If after engine run operation and the Water in Fuel Message appears on solid, please check the water separator / filter for moisture.



 Hide Details

Feedback Information

Viewed: 1475
Helpful: 264
Not Helpful: 313

No Feedback Found

Copyright © 2014 Navistar, Inc.