



Countries:	CANADA, UNITED STATES, PUERTO RICO	Document ID:	IK0800361
Availability:	ISIS, FleetISIS	Revision:	1
Major System:	ELECTRICAL SYSTEM	Created:	4/26/2012
Current Language:	English	Last Modified:	12/2/2013
Other Languages:	NONE	Author:	Matthew Boyer
Viewed:	153		

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 4	 0

Title: Bluetooth® Stereo Adapter Information

Applies To: All Bluetooth® Equipped units

DESCRIPTION

On units equipped with a Bluetooth® stereo, there are some basic operational checks that can be made when there is a complaint with the system operation.

NOTE:

The Bluetooth® audio comes out of the Front Left speaker.

Follow these steps to make sure the radio is installed correctly.

- Determine how many channels the vehicle has.
 - Our vehicles stereos will have a 2 channel system, a 4 channel system, or a 4 channel premium that has 6, 8 or 10 speakers.
 - You only need to know if its 2 channel or 4 channel, based on the number of speakers are in the vehicle.
- Once you determine if it's a 2 channel or 4 channel vehicle you have to make sure the radio is set to the appropriate mode (2 channel or 4 channel).
 1. Press "Title/Menu" button for 2 seconds (until you hear a beep) to enter "main menu"
 2. Press "UP" until you get to "Speakers", then press "OK"
 3. Press up to select "2CH" or "4CH" to correspond to the number of speakers in the vehicle.
 4. Press "ESC" a few times to exit out of the "main menu"
- Now you want to verify the speaker location.
 1. Press the Volume knob in for 2 seconds to bring up the audio menu


2. Turn the Volume knob (left or right) until you see "FADE" (note if you have it on 2 channel mode then there will not be a fade option, if so skip to step 4).
 3. Press the Volume knob to select "FADE" then turn the knob to the left until the Fade is only on the front speakers, then press "OK"
 4. Turn the Volume knob until you see "Balance" and press the knob to select it.
 5. Turn the volume knob left until the Balance is only on the left speaker.
- You have now isolated the left front speaker. If you hear audio then the radio is installed correctly, if not then there is a wiring issue.

If you determine there is a wiring issue, verify all wiring is properly connected and has continuity from the radio to the speaker or microphone.

The Microphone should have approx 7.2v - 8.8v power supply.

Attached is the wiring diagram and photos relating to the factory installed Bluetooth® system.

[Printable Wiring Schematic](#)

 Hide Details	Feedback Information
	Viewed: 152
	Helpful: 4
	Not Helpful: 0
No Feedback Found	

Copyright © 2014 Navistar, Inc.