

Rear View Monitor System Initialization

Service Category General

Section Pre-Delivery Service

Market USA

Toyota Supports
 ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2014	Sienna	

Introduction

As a result of the removal of the Short Pin, the power source to the steering angle sensor is cut off. When the Short Pin is reinstalled, the rear view monitor system will be operative, but it cannot display guidelines to assist parking operation because the center position is not recognized by the steering angle sensor. Please initialize the rear view monitor system after installing the Short Pin during Pre-Delivery Service (PDS).

NOTE

Anytime the battery terminal has been disconnected, the rear view monitor system **MUST** be re-initialized.

Warranty Information


OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

Initialization Procedure

1. Start the engine.
2. Move the shift lever to the “R” (Reverse) position to confirm that the Advanced Parking Guidance System is inoperative.

“System Initializing.” appears on the rear view monitor as shown in Figure 1.

Figure 1.

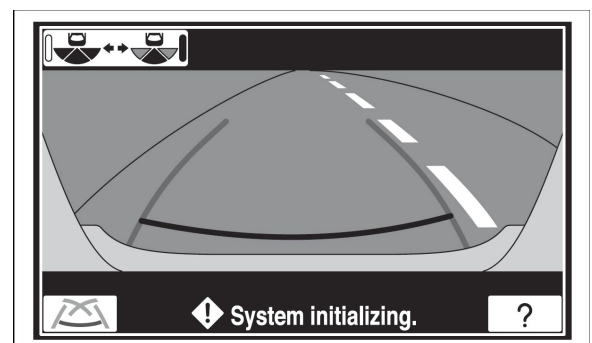

Rear View Monitor System Initialization

Initialization Procedure (Continued)

3. Move the shift lever to the "P" (Park) position. Turn the steering wheel lock to lock.
4. Move the shift lever to the "R" (Reverse) position and touch the parallel parking mode switch on the screen.
5. When the guidelines and "*Check surroundings for safety.*" appear on the rear view monitor as illustrated in Figure 2, the initialization is complete.

Figure 2.

