

Repair Manual Supplement: SRS DTCs Not Listed in Repair Manual

Service Category Vehicle Interior

Section Supplemental Restraint Systems

Market USA

Toyota Supports ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2012	Corolla, Prius, Prius V, Sienna, Venza	

REVISION NOTICE

April 9, 2013 Rev1:

- SRS DTC Cross Reference List has been updated for Prius, Prius V, Sienna, and Venza vehicles.

Any previous printed versions of this bulletin should be discarded.

Introduction

Some 2012 model year Corolla, Prius, Prius V, Sienna, and Venza vehicles may set SRS Diagnostic Trouble Codes (DTCs) that are not listed in the Repair Manual. Refer to the chart in this bulletin to diagnose these DTCs.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

Required Tools & Equipment

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
Techstream 2.0*	ADE	TS2UNIT	1
TIS Techstream		TSPKG1	
Techstream Lite		TSLITEDLR01	

* Essential SST.

Repair Manual Supplement: SRS DTCs Not Listed in Repair Manual

Required Tools & Equipment (Continued)

NOTE

- Only ONE of the Techstream units listed above is required.
- Software version 8.10.021 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787.

SRS DTC Cross Reference List

If an SRS DTC set is not listed in the Repair Manual, refer to the chart below. Follow the diagnostic procedures listed in the Repair Manual for the corresponding Repair Manual DTC.

MODEL	SET DTC	DETECTION ITEM	REPAIR MANUAL DTC
Corolla	B1603	Front Satellite Sensor Bus RH Initialization Incomplete	B1610
	B1608	Front Satellite Sensor Bus LH Initialization Incomplete	B1615
	B1612	Lost Communication with Front Airbag Sensor RH	B1610
	B1613	Front Airbag Sensor RH Initialization Incomplete	B1610
	B1617	Lost Communication with Front Airbag Sensor LH	B1615
	B1618	Front Airbag Sensor LH Initialization Incomplete	B1615
	B1623	Side Airbag Sensor RH Initialization Incomplete	B1620
	B1628	Side Airbag Sensor LH Initialization Incomplete	B1625
	B1632	Lost Communication with No. 2 Side Airbag Sensor RH	B1630
	B1633	No. 2 Side Airbag Sensor RH Initialization Incomplete	B1630
	B1637	Lost Communication with No. 2 Side Airbag Sensor LH	B1635
	B1638	No. 2 Side Airbag Sensor LH Initialization Incomplete	B1635
	B1642	Lost Communication with Side Satellite Sensor Bus RH	B1630
	B1643	Side Satellite Sensor Bus RH Initialization Incomplete	B1630
	B1647	Lost Communication with Side Satellite Sensor Bus LH	B1635
	B1648	Side Satellite Sensor Bus LH Initialization Incomplete	B1635
B1656	Seat Belt Buckle Switch LH Circuit	B1771*	

* Refer to B1771 of Occupant Classification System.

Repair Manual Supplement: SRS DTCs Not Listed in Repair Manual

SRS DTC Cross Reference List (Continued)

MODEL	SET DTC	DETECTION ITEM	REPAIR MANUAL DTC
Prius	B1603	Front Satellite Sensor Bus RH Initialization Incomplete	B1610
	B1608	Front Satellite Sensor Bus LH Initialization Incomplete	B1615
Prius V	B1603	Front Satellite Sensor Bus RH Initialization Incomplete	B1610
	B1608	Front Satellite Sensor Bus LH Initialization Incomplete	B1615
Sienna	B1603	Front Satellite Sensor Bus RH Initialization Incomplete	B1610
	B1608	Front Satellite Sensor Bus LH Initialization Incomplete	B1615
	B1643	Side Satellite Sensor Bus RH Initialization Incomplete	B1630
	B1648	Side Satellite Sensor Bus LH Initialization Incomplete	B1635
Venza	B1603	Front Satellite Sensor Bus RH Initialization Incomplete	B1610
	B1608	Front Satellite Sensor Bus LH Initialization Incomplete	B1615
	B1643	Side Satellite Sensor Bus RH Initialization Incomplete	B1630
	B1648	Side Satellite Sensor Bus LH Initialization Incomplete	B1635