



Countries: CANADA, UNITED STATES

Document ID: IK0400051

Availability: ISIS, Bus ISIS, FleetISIS

Revision: 4

Major System: BRAKES

Created: 6/26/2008

Current Language: English

Last Modified: 1/4/2013

Other Languages: [Français](#), [Español](#), [Portuguese](#), Author:

Viewed: 6969

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 1695	 1820

Title: Bendix Air Dryer Troubleshooting All Models**Applies To: Bendix AD-9, AD-IS, AD-IP air dryers**

DESCRIPTION

Bendix Air Dryer Troubleshooting AD-9, AD-IS, AD-IP

SYMPTOMS

- Dryer is constantly “cycling” or purging. Dryer purges frequently (every 4 minutes or less while vehicle is idling).
- Water in vehicle reservoir.
- Water and/or Oil in Supply or Service Reservoir
- Oil present at air dryer purge exhaust or cartridge during maintenance.
- Safety valve on air dryer “popping off” or exhausting air.
- Constant exhaust of air at air dryer purge valve exhaust. (Charge mode.)
- Can not build system air pressure.
- Air dryer does not purge or exhaust air.
- Desiccant material being expelled from air dryer purge valve exhaust (may look like whitish liquid or paste or small beads.) - OR - Unsatisfactory desiccant life.
- “Pinging” noise excessive during compressor loaded cycle.
- Constant seepage of air at air dryer purge valve exhaust (non-charging mode.)
- The air dryer purge piston cycles rapidly in the compressor unloaded (noncompressing) mode.

TROUBLESHOOTING

- [Bendix AD - 9 Troubleshooting](#)
- [Bendix AD - IS Troubleshooting](#)
- [Bendix AD - IP Troubleshooting](#)
- [Bendix AD - IP Everflow Troubleshooting](#)

Hide Details

Feedback Information

Viewed: 6968

Helpful: 1695

Not Helpful: 1820

No Feedback Found

Copyright © 2013 Navistar, Inc.