



Countries: CANADA, UNITED STATES **Document ID:** IK0800444
Availability: ISIS, FleetSIS **Revision:** 0
Major System: ELECTRICAL SYSTEM **Created:** 8/14/2013
Current Language: English **Last Modified:** 8/15/2013
Other Languages: NONE **Author:** Chris Moody
Viewed: 80

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 1	Not Helpful 0
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	-------------------------	-----------------------------

Title: VIS Display wont boot up

Applies To: ProStar, LoneStar

DESCRIPTION

The customer will report the VIS screen fails to boot up. It might show the international logo and appear to be in a boot up loop. Certain serial number units had a corrupt SD card installed at the supplier which would cause this issue.

Feature Code

0016HLP, ELECT VEHICLE MONITOR/WING PANEL/WI-FI or
0016HLN, ELECT VEHICLE MONITOR IN WING PANEL

PARTS INFORMATION

Depending on feature code, one of these will be required:

Part #	Description	Qty.
6108650C1	T8510	1
6108655C1	T8520	1

REPAIR PROCEDURE

If the unit appears to have a problem booting up to the main screen, check the unit serial number. If the unit's serial number is one on the list below, the unit will have to be replaced.

Order parts unit down from the PDC.

OTHER RESOURCES

[VIS Display serial numbers:](#)

If further assistance is needed, open up a casefile with tech service.

Hide Details

Feedback Information

Viewed: 79 Helpful: 1 Not Helpful: 0 No Feedback Found
