



<b>Countries:</b>	CANADA, UNITED STATES, MEXICO	<b>Document ID:</b>	IK1200431
<b>Availability:</b>	ISIS, FleetISIS, Body Builder	<b>Revision:</b>	2
<b>Major System:</b>	ENGINES	<b>Created:</b>	1/8/2010
<b>Current Language:</b>	English	<b>Last Modified:</b>	3/5/2013
<b>Other Languages:</b>	<a href="#">Portuguese</a> ,	<b>Author:</b>	Al Schnellenberger
<b>Viewed:</b>	483		

[Less Info](#)

Hide Details

Coding Information


<b>Copy Link</b> 	<b>Copy Relative Link</b> 	<b>Bookmark</b>  <a href="#">View My Bookmarks</a>	<b>Add to Favorites</b> 	<b>Print</b> 	<b>Provide Feedback</b> 	<b>Helpful</b>  95	<b>Not Helpful</b>  118
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	--------------------------	-------------------------------

**Title: 2006-2009 Cummins Ambient Air Temperature (AAT) Sensor Located Rear of Vehicle**

**Applies To: ProStar, LoneStar, TransStar**

## DESCRIPTION

The Cummins engine air temperature sensor may be relocated at the rear of the chassis, instead of the front, on some models. This can be mistaken for a ground connector. Do not bolt this sensor to ground. It should remain strapped to the harness.

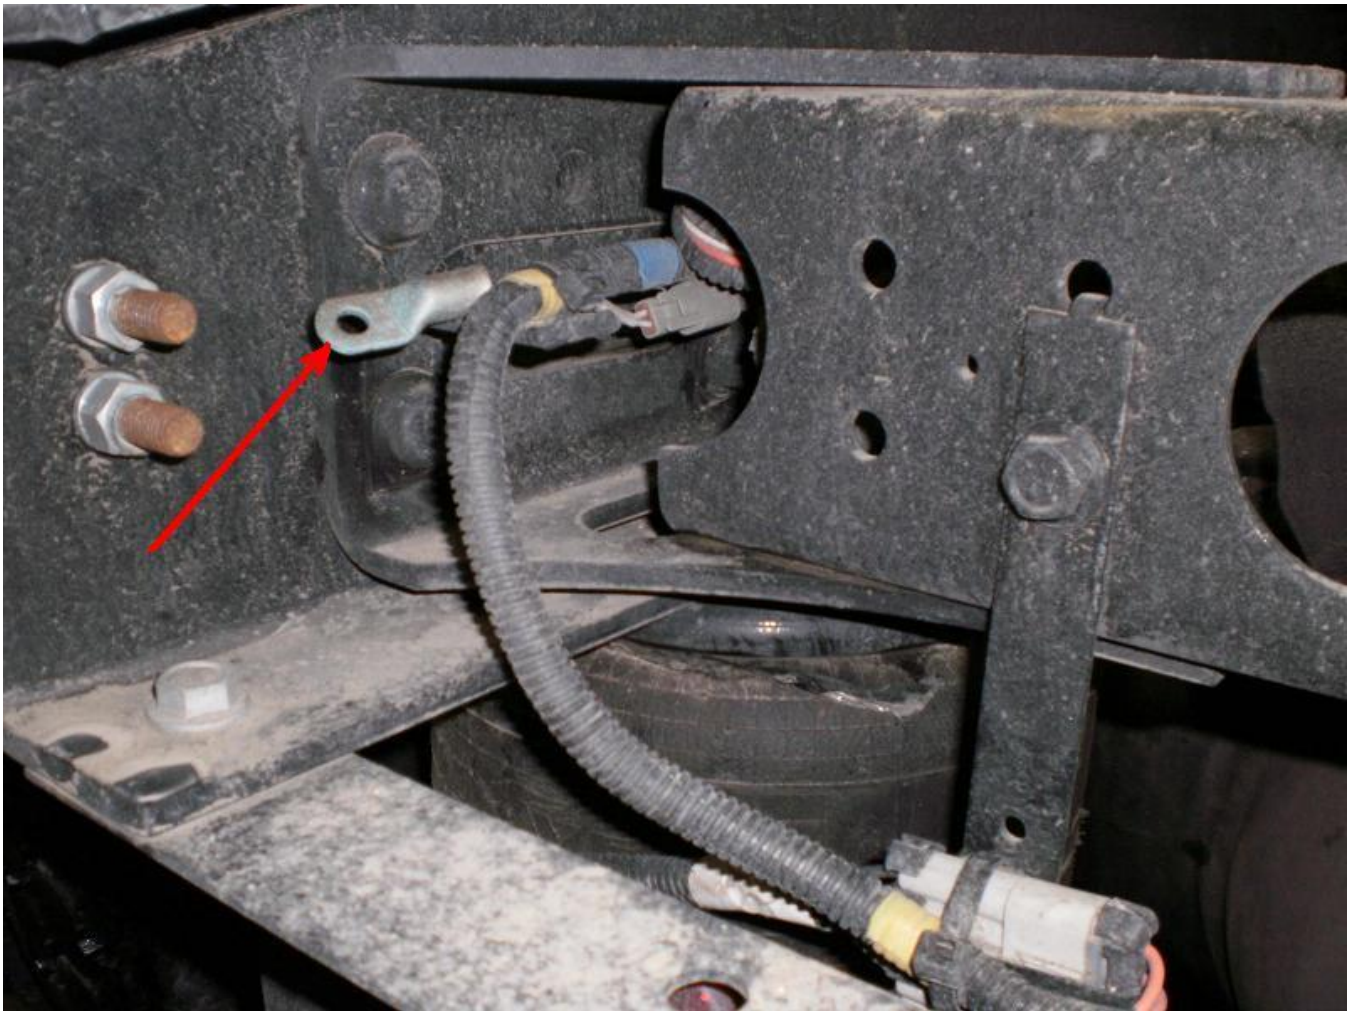

## RESOLUTION

This can be mistaken for a ground connector (lug). Do not bolt this sensor to ground. It should remain strapped to the harness.

 Hide Details

### Feedback Information

Viewed: 482

Helpful: 95

Not Helpful: 118

No Feedback Found

Copyright © 2013 Navistar, Inc.