



<b>Countries:</b>	CANADA, UNITED STATES	<b>Document ID:</b>	IK1900172
<b>Availability:</b>	ISIS, FleetISIS, Body Builder	<b>Revision:</b>	10
<b>Major System:</b>	ACCESSORIES	<b>Created:</b>	11/4/2011
<b>Current Language:</b>	English	<b>Last Modified:</b>	3/5/2013
<b>Other Languages:</b>	NONE	<b>Author:</b>	Adam Lesho
<b>Viewed:</b>	5524		

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 <a href="#">View My Bookmarks</a>				 417	 316

**Title: MaxxPower No Idle Battery-Powered Heater System Diagnostic Guide**

**Applies To: Feature code 16UZL**

## DESCRIPTION

This IKnow covers the heat side of the no idle HVAC system (16UZL). This battery-powered no idle HVAC system provides heating and cooling of the sleeper area without use of the vehicle engine.

### NOTE:

**Per the Operators Manual page 10: Run the heater at least once a month during the year (for a minimum of 15 minutes).**

- For ESPAR Hydronic operators manual [CLICK HERE](#)
- For ESPAR Hydronic D5 [CLICK HERE](#)
- For ESPAR Hydronic and Airtronic diagnostic tooling information [CLICK HERE](#)
- For ESPAR Hydronic Installation/ Troubleshooting/ Parts manual [CLICK HERE](#)
- For Hydronic D5 diagnostic overview training [CLICK HERE](#)
- For ESPAR Hydronic Pre-Season Maintenance [CLICK HERE](#)
- For ESPAR Airtronic Installation/Troubleshooting/Parts manual [CLICK HERE](#)
- For a list of part numbers for the Airtronic and Hydronic system [Click Here](#)
- For EDITH Getting started guide and cable P/N [CLICK HERE](#)

## OTHER RESOURCES

- [MaxxPower No Idle Battery-Powered AC System Diagnostic Guide.](#)
- MaxxPower HVAC operators manual [CLICK HERE](#)
- MaxxPower HVAC wiring diagram [CLICK HERE](#)
- [ESPAR.COM](#)

 Hide Details

**Feedback Information**

Viewed: 5523

Helpful: 417

Not Helpful: 316

No Feedback Found

Copyright © 2013 Navistar, Inc.