

Technical Service Bulletin

SUBJECT:			No:	TSB-13-13-003
KNOCK SENSOR DIAGRAM UPDATE –			DATE:	February, 2013
SERVICE MANUAL REVISION			MODE	L: 2009-2010 Outlander
CIRCULATE TO:	[] GENERAL MANAGER	[] PARTS MANAGER		[X] TECHNICIAN
[X] SERVICE ADVISOR	[X] SERVICE MANAGER	[] WARRANTY PROCESS	OR	[] SALES MANAGER

PURPOSE

This TSB updates the diagrams regarding the knock sensor's location and connector number in the service manual of affected vehicles.

AFFECTED VEHICLES

2009-2010 Outlander with 3.0L Engine

AFFECTED SERVICE MANUALS

2009 Outlander Service Manual

Group 70: Component Locations - Sensor

Group 80: Configuration Diagrams - Engine and Transaxle <3.0L Engine>

Group 90: Circuit Diagrams - MFI System <3.0L Engine>


2010 Outlander Service Manual

Group 70: Component Locations - Sensor

Group 80: Configuration Diagrams - Engine and Transaxle <3.0L Engine>

Group 90: Circuit Diagrams - MFI System <3.0L Engine>

For the 2009 Outlander Service Manual Group 70: Components Location – Sensor, please update the diagram displaying the knock sensor's location as follows:

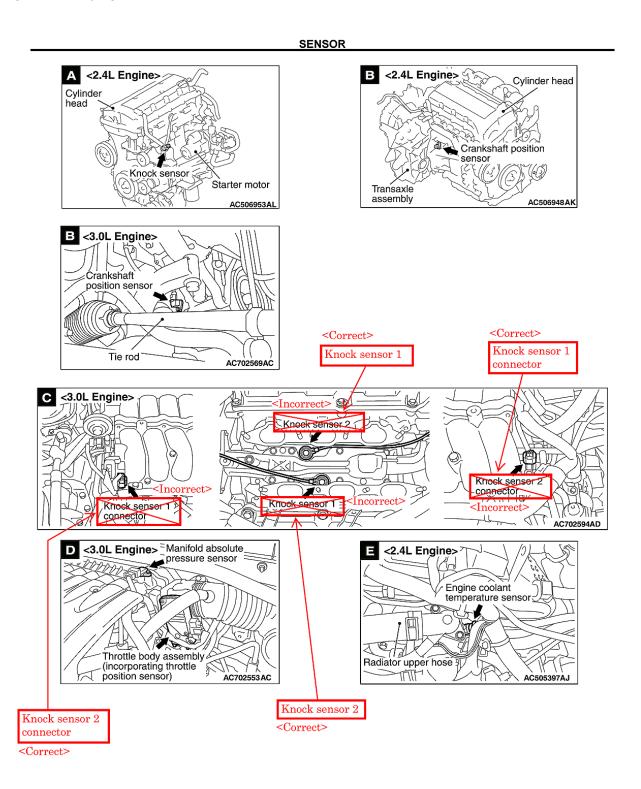

For the 2009 Outlander Service Manual Group 80: Configuration Diagrams – Engine and Transaxle <3.0L Engine>, please update the diagram displaying the knock sensor's connector number as follows:

ENGINE AND TRANSAXLE <3.0L ENGINE> ENGINE AND TRANSAXLE <3.0L ENGINE> Connector symbol B -01 thru Injector wiring harness Control wiring harness B-12 (6-GR) Exhaust gas recirculation valve No.1 ignition coil B-01 (3-B)B-13 (4-GR) Left bank heated oxygen sensor B-02 (4-B)Right bank heated oxygen sensor (Rear) (Rear) B-14 Left bank heated oxygen sensor (4-B) B-03 (4-GR) Right bank heated oxygen sensor (Front) (Front) B-15 (3-B)No.6 ignition coil B-04 (3-B)No.3 ignition coil No.5 ignition coil B-16 (1) Engine oil pressure switch B-05 (3-B)A/C compressor assembly B-06 Knock sensor 2 <Incorrect> B-17 (1-B)(2-B) B-18 (3-B)No.4 ignition coil Evaporative emission purge solenoid B-07 (2-B) B-19 (3-B) No.2 ignition coil B-08 (6-B) Throttle body assembly Knock sensor 1 <Incorrect> B-20 (2-B)Engine coolant temperature sensor B-09 (2-B)(10-B) 7 B-21 Control wiring harness and injector Engine control module B-10 (64-GR) wiring harness combination (48-GR) Engine control module B-11


Knock sensor 1

<Correct>


Knock sensor 2

<Correct>


For the 2009 Outlander Service Manual Group 90: Circuit Diagrams – MFI System <3.0L Engine>, please update the diagram displaying the knock sensor's connector number as follows:

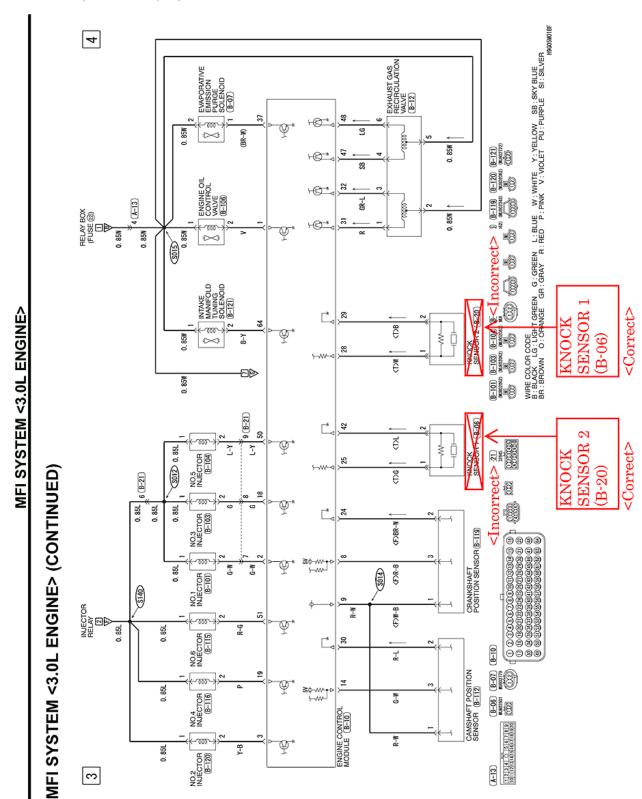

For the 2010 Outlander Service Manual Group 70: Components Location – Sensor, please update the diagram displaying the knock sensor's location as follows:

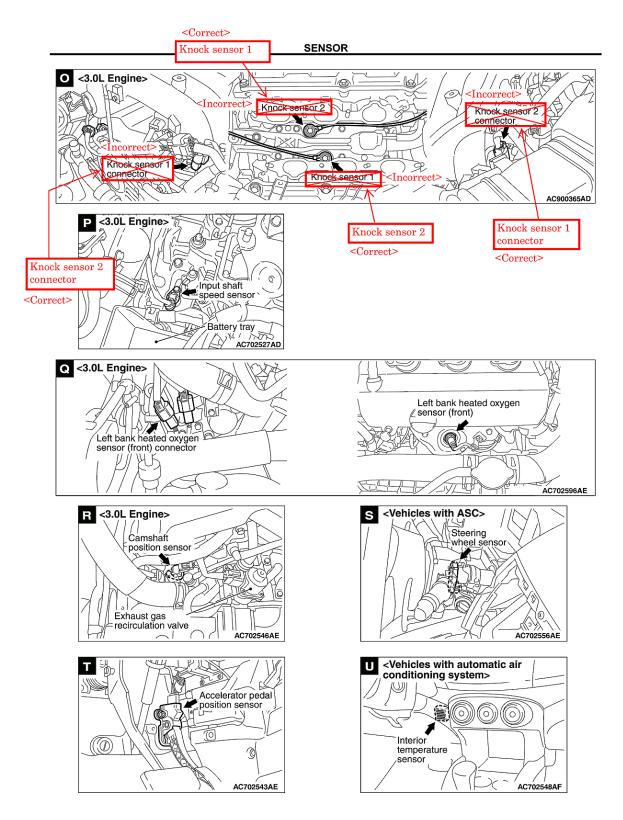

For the 2010 Outlander Service Manual Group 80: Configuration Diagrams – Engine and Transaxle <3.0L Engine>, please update the diagram displaying the knock sensor's connector number as follows:

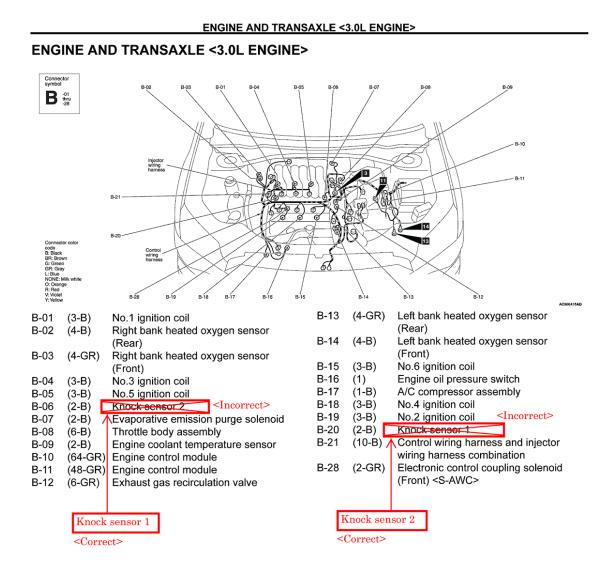

For the 2010 Outlander Service Manual Group 90: Circuit Diagrams – MFI System <3.0L Engine>, please update the diagram displaying the knock sensor's connector number as follows:

