



SB-10053566-5034

Technical Service Bulletin

SUBJECT:			No: TSB-13-35-006
BRAKE PIPE FASTENER TORQUE – SERVICE MANUAL REVISION			DATE: October, 2013
			MODEL: See below
CIRCULATE TO:	<input type="checkbox"/> GENERAL MANAGER	<input checked="" type="checkbox"/> PARTS MANAGER	<input checked="" type="checkbox"/> TECHNICIAN
<input type="checkbox"/> SERVICE ADVISOR	<input checked="" type="checkbox"/> SERVICE MANAGER	<input type="checkbox"/> WARRANTY PROCESSOR	<input type="checkbox"/> SALES MANAGER

PURPOSE

This TSB corrects fastener tightening torque specifications shown in the service manual.

AFFECTED VEHICLES

2007–2014 Outlander
 2008–2014 Lancer
 2008–2014 Lancer Evolution
 2009–2014 Lancer Sportback
 2011–2014 Outlander Sport/RVR

AFFECTED SERVICE MANUALS

2007 – 2009 Outlander Service Manual,
 Group 35A, Basic Brake > Master Cylinder and Brake Booster > Removal and Installation
 Group 35B, Anti-Lock Brake System (ABS) > Hydraulic Unit > Removal and Installation
 Group 35C, Active Skid Control (ASC) > Hydraulic Unit > Removal and Installation

2010 – 2011 Outlander Service Manual,
 Group 35A, Basic Brake > Master Cylinder Assembly and Brake Booster Assembly>
 Removal and Installation
 Group 35B, Anti-Lock Brake System (ABS) > Hydraulic Unit > Removal and Installation
 Group 35C, Active Stability Control (ASC) > Hydraulic Unit > Removal and Installation

2012 – 2014 Outlander Service Manual,
 Group 35A, Basic Brake > Master Cylinder Assembly and Brake Booster Assembly>
 Removal and Installation
 Group 35C, Active Skid Control (ASC) > Hydraulic Unit > Removal and Installation

2008 Lancer Service Manual,
 Group 35A, Basic Brake > Master Cylinder Assembly and Brake Booster Assembly>
 Removal and Installation
 Group 35B, Anti-Lock Brake System (ABS) > Hydraulic Unit > Removal and Installation
 Group 35C, Active Skid Control (ASC) > Hydraulic Unit > Removal and Installation

2009 Lancer Service Manual,
 Group 35A, Basic Brake > Master Cylinder and Brake Booster > Removal and Installation
 Group 35C, Active Skid Control (ASC) > Hydraulic Unit > Removal and Installation

2010 Lancer Service Manual,
 Group 35A, Basic Brake > Master Cylinder Assembly and Brake Booster Assembly>
 Removal and Installation
 Group 35C, Active Stability Control (ASC) > Hydraulic Unit > Removal and Installation

2009 Lancer Sportback Service Manual,
 Group 35A, Basic Brake > Master Cylinder Assembly and Brake Booster Assembly>
 Removal and Installation
 Group 35B, Anti-Lock Brake System (ABS) > Hydraulic Unit > Removal and Installation
 Group 35C, Active Skid Control (ASC) > Hydraulic Unit > Removal and Installation

Continued

Copyright 2013, Mitsubishi Motors North America, Inc.

(4055)

The information contained in this bulletin is subject to change. For the latest version of this document, go to the Mitsubishi Dealer Link, MEDIC, or the Mitsubishi Service Information website (www.mitsubishitechinfo.com)

- 2010 Lancer Sportback Service Manual,
 - Group 35A, Basic Brake > Master Cylinder Assembly and Brake Booster Assembly> Removal and Installation
 - Group 35C, Active Stability Control (ASC) > Hydraulic Unit > Removal and Installation
- 2011 – 2014 Lancer/Lancer Sportback Service Manual,
 - Group 35A, Basic Brake > Master Cylinder Assembly and Brake Booster Assembly> Removal and Installation
 - Group 35B, Anti-Lock Brake System (ABS) > Hydraulic Unit > Removal and Installation
 - Group 35C, Active Stability Control (ASC) > Hydraulic Unit > Removal and Installation
- 2008 Lancer Evolution Service Manual,
 - Group 35A, Basic Brake >Master Cylinder Assembly and Brake Booster Assembly > Removal and Installation
 - Group 35C, Active Skid Control (ASC) > Hydraulic Unit > Removal and Installation
- 2009 – 2014 Lancer Evolution Service Manual,
 - Group 35A, Basic Brake >Master Cylinder Assembly and Brake Booster Assembly > Removal and Installation
 - Group 35C, Active Stability Control (ASC) > Hydraulic Unit > Removal and Installation
- 2011 – 2014 Outlander Sport/RVR Service Manual,
 - Group 35A, Basic Brake > Master Cylinder Assembly and Brake Booster Assembly > Removal and Installation
 - Group 35A, Basic Brake > Hydraulic Unit > Removal and Installation



Please make the corrections shown below in the Applicable Service Manuals listed above.

