



SB-10053789-7763

Technical Service Bulletin

SUBJECT:			No: TSB-13-27-001
REAR WHEEL BEARING INSTALLATION – SERVICE MANUAL REVISION			DATE: September, 2013
			MODEL: 2014 Mirage
CIRCULATE TO:	<input type="checkbox"/> GENERAL MANAGER	<input checked="" type="checkbox"/> PARTS MANAGER	<input checked="" type="checkbox"/> TECHNICIAN
<input checked="" type="checkbox"/> SERVICE ADVISOR	<input checked="" type="checkbox"/> SERVICE MANAGER	<input type="checkbox"/> WARRANTY PROCESSOR	<input type="checkbox"/> SALES MANAGER

PURPOSE

This TSB adds a statement to the Rear Wheel Bearing Installation Assembly Service Point in the service manual to clarify rear wheel bearing installation direction.

AFFECTED VEHICLES

2014 Mirage

AFFECTED SERVICE MANUALS

2014 Mirage Service Manual, Group 27 > Rear Axle > Rear Axle Hub Assembly > Disassembly and Reassembly

Continued

Copyright 2013, Mitsubishi Motors North America, Inc.


(4058)

The information contained in this bulletin is subject to change. For the latest version of this document, go to the Mitsubishi Dealer Link, MEDIC, or the Mitsubishi Service Information website (www.mitsubishitechinfo.com)

Please insert the indicated changes into the 2014 Mirage Service Manual, Group 27 – Rear Axle > Rear Axle Hub Assembly > Disassembly and Reassembly > Assembly Service Point

REAR AXLE
REAR AXLE HUB ASSEMBLY

ASSEMBLY SERVICE POINT

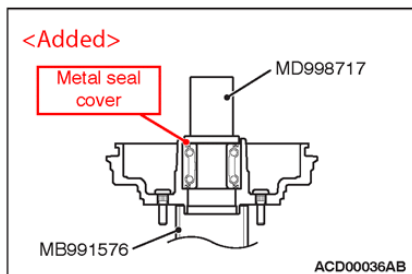

>>A<< WHEEL BEARING INSTALLATION

Use the following special tools to press-fit the wheel bearing:

- Oil seal installer (MD998717)
- Base (MB991576)

<Added> Install the sealed wheel bearing assembly with tool MD998717 pressing on the end of the assembly with the silver metal seal cover.

>>B<< WHEEL BEARING ROTARY-SLIDING RESISTANCE CHECK

Refer to P.27-4.

>>C<< WHEEL BEARING END PLAY CHECK

Refer to P.27-4.