

Symptom: Vehicle towed in presenting a "no start/no crank" concern.

Repair: After checking all of the inputs needed to start the engine, check the starter solenoid snap-in connector for possible pin tension/damage concern. Check that the connector is firmly installed into the starter solenoid. This may correct the concern.

Note: Tech Tips are not a substitute for proper diagnosis.