



**ROM ID INFORMATION TABLE:**


Verify the ECM ROM ID before updating the vehicle’s software. Refer to the table below.

Model	ECM P/N	T/M	*SSB/ Key Start	ROM ID	
				Previous	New
FS 1.6 T-GDI	39118-2BBJ0	MT	SSB	GTFS-CNU6FS00600 GTFS-CNU6FS01600 GTFS-CNU6FS02600	GTFS-CNU6FS03600
	39118-2BBK0		Key	GTFS-CNU6ES00600 GTFS-CNU6ES01600 GTFS-CNU6ES02600	GTFS-CNU6ES03600
	39118-2BBJ5	AT	SSB	GTFS-CNU6QS00C00 GTFS-CNU6QS01C00 GTFS-CNU6QS02C00	GTFS-CNU6QS03C00
	39118-2BBK5		Key	GTFS-CNU6PS00C00 GTFS-CNU6PS01C00 GTFS-CNU6PS02C00	GTFS-CNU6PS03C00

\*SSB= Start Stop Button

**GENERAL PRECAUTIONS:**

- Connect the USB cable between the GDS and the VCI.
- Connect the 16-pin DLC connector from the VCI into the DLC located under the driver’s side dash.

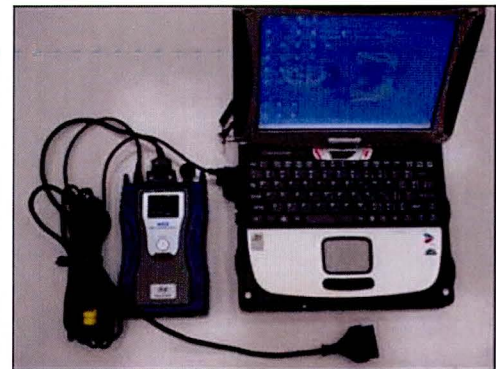

**\* NOTE**

Make sure the battery icon at the bottom right of the GDS laptop shows at least 50%; if not, charge the GDS or attach a battery charger.

- Turn off all lights (Do not leave the headlight switch in auto mode) and all accessories (including heater/air conditioner/fan, audio, heated seats, rear defroster, etc) to ensure the battery will not be discharged during the update.
- Perform the update with the ignition key in the ON position.
- Do not disconnect any cables connected to the vehicle or the GDS during the update.
- Do not start the engine or turn the ignition switch OFF during the update.

## \* NOTE


Confirm your GDS has the most recent version. If not, connect the GDS to an Internet port, open the GDS home page and select "Update". Refer to instructions on [hmaservice.com](http://hmaservice.com) if necessary.

If you encounter GDS related problems, call the GIT Helpline at 888-437-0308.


## SERVICE PROCEDURE:

### GDS AUTO MODE ECM UPDATE PROCEDURE

1. From the GDS home page, select **ECU Upgrade**. If necessary, select the VIN.
2. Select **Engine** as the system and then select **OK**.
3. Select **Auto Mode** and then select **Next**.
4. From the **System** tab, select **Engine** and then select **OK**. The GDS will read the ROM ID. Confirm the ROM is applicable as shown on Page 2, "ROM ID Information".

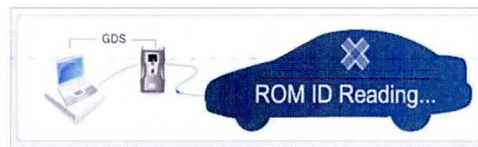

5. Select update event as listed on the **GDS Event list of page-1**. Select **Upgrade**.

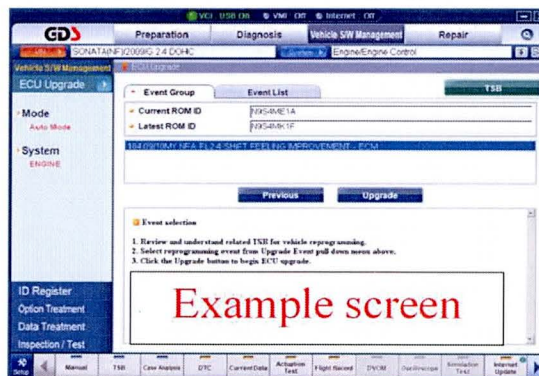

6. If the screen indicates "**Voltage is OK**" (voltage > 12volts), select **OK**. If not, select **CANCEL** and charge the vehicle battery by running the engine for 10 minutes.
7. Updating will occur until 100% is reached on the bar graph. At the prompt, turn the ignition key OFF for 10 seconds, then turn it ON and select **OK**.
8. The GDS will confirm that ECM reprogramming is successfully finished. Select **OK**.
9. If the ECM update was not successful, go to **GDS MANUAL MODE ECM UPDATE PROCEDURE**.

10. Check for DTC in all systems and Erase All DTC that stored due to loss of CAN communication during the ECM Update.
11. Turn **OFF ignition for 10 seconds** then turn **ON** before going to engine start.
12. Start the engine to confirm proper operation.
13. Clear DTC in the BlueLink system per instructions of TSB 12-BE-005-2.

### GDS MANUAL MODE ECM UPDATE PROCEDURE

#### ★ NOTE

- GDS Manual Mode is intended for recovery of an ECM Update should it begin but then later fail in process in the Auto Mode.
- The ECM connectors must be disconnected for 15 minutes to reset its contents then perform this Manual Mode Update.
- Do not force Manual Mode if you get an error in Auto Mode that the vehicle's current ROM ID did not apply.
- It is critical to identify the correct ECM Part Number in the PASSWORD table or the ECM may be permanently damaged. It is recommended to remove ECM and read the part number from the label to confirm.

1. From the GDS home page, select **ECU Upgrade**. If necessary, select the VIN.
2. Select **Engine** as the system and then select **OK**.
3. Select **Manual Mode** and then select Next.
4. From the **System** tab, select **Engine** and then select **OK**.
5. Select update event as per the **GDS Event List of page-1**, then select **Upgrade**.
6. Be certain to enter the exact appropriate password from the table below and select **OK**. **See the important NOTE above.**
7. The remaining steps are same as Steps 6~13 of the Auto Procedure.

MENU	SSB/Key Start	PASSWORD
FS 1.6 T-GDI MT IMMO : 39118-2BBJ0	SSB	1820
FS 1.6 T-GDI MT NON IMMO : 39118-2BBK0	Key	1821
FS 1.6 T-GDI AT IMMO : 39118-2BBJ5	SSB	1825
FS 1.6 T-GDI AT NON IMMO : 39118-2BBK5	Key	1826