

Initialization of Front Memory Seat ECU

Service
Category General

Section Pre-Delivery Service

Market USA

Lexus Supports
ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2015	IS250C, IS350C	

Introduction

As a result of the removal of the DCC fuse, the "driving position memory" function of the driver and passenger side seat will be inoperative due to the loss of seat position memory stored in the seat ECU. Use the following procedure to initialize the seat ECU after installing the DCC fuse.

Warranty Information


OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	-	-	-	-

Initialization of Front Memory Seat ECU

Initialization Procedure

1. Cycle the ignition switch to the "IG-ON" position.
2. Press the seat cushion (front) angle switch down 3 times. Reference (a-1) in Figure 1.
3. Within 10 seconds, simultaneously operate seatback angle switch to the rear side and push UP on the vertical height adjustment switch until a beep sound is emitted. Reference (a-2) in Figure 1.
4. Push the seat position control switch forward, sliding the seat to the full forward or most forward position until a beep sound is emitted. Reference (b) in Figure 1.

Figure 1.

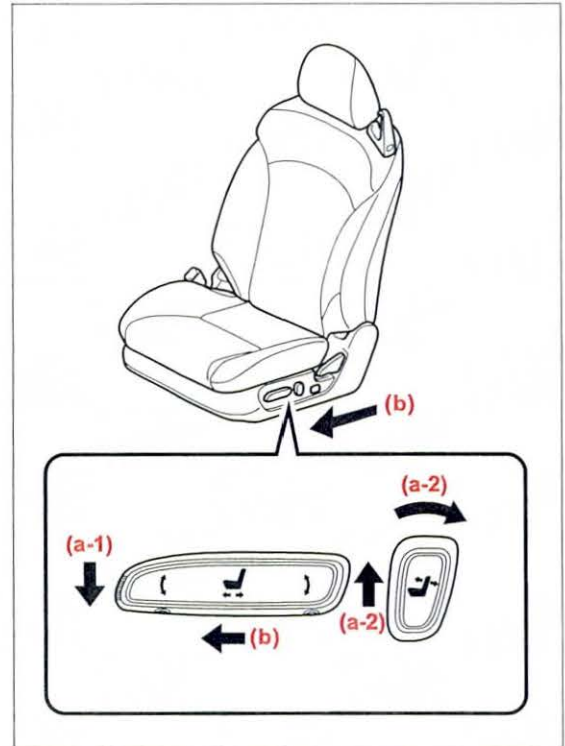

Initialization of Front Memory Seat ECU

Initialization Procedure (Continued)

5. Push the seatback angle switch forward, moving the seatback angle to the foremost position until a beep sound is emitted. Reference (c) in Figure 2.
6. Push the vertical height adjustment switch downward, moving the seat to the down most position until a beep sound is emitted. Reference (d) in Figure 2.
7. Repeat steps 2 – 6 to initialize the other front seat.

Figure 2.

