

# DCC Fuse Installation During PDS

Service  
Category General

Section Pre-Delivery Service

Market USA

Lexus Supports  
ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2015	GS350	

## Introduction

To minimize battery discharge during transportation and storage, the DCC fuse (30A) has been removed at the assembly plant, and temporarily stored in the blank space of the fuse block in the engine compartment.

During Pre-Delivery Service (PDS), reinstall the DCC fuse into its original location.

## Warranty Information


OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	-	-	-	-

## DCC Fuse Installation During PDS

### Installation Procedure

1. Remove the DCC fuse (30A) from the blank space of the fuse block in the engine compartment and install it in the location shown in Figure 1 during Pre-Delivery Service (PDS).

Figure 1.

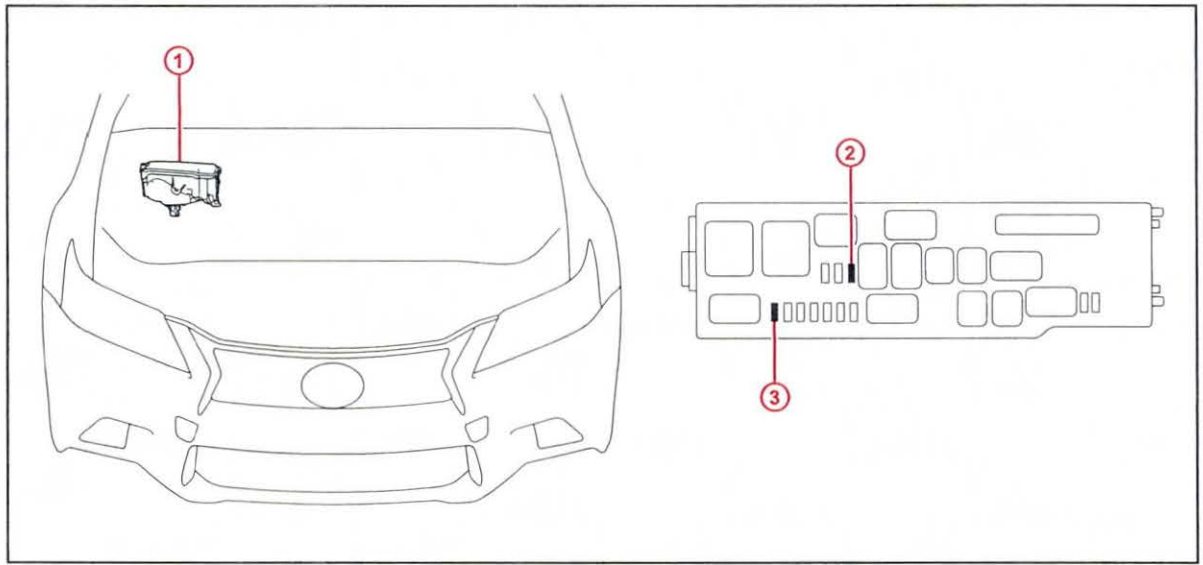

1	Relay Block
2	Remove this DCC Fuse

3	Install DCC Fuse Here
---	-----------------------

**NOTE**

- Removing the DCC fuse cuts OFF power sources relating to the DOME and MPX-B.
- While the vehicle is stored at the dealership, disconnect the negative (-) battery terminal to prevent battery discharge. Refer to Service Bulletin No. [PG001-06](#), "Battery Maintenance for In-Stock Vehicles & Pre-Delivery," for battery maintenance information.