

Amerivan Classic 14" Chrysler/Dodge

Ramp Stow position Adjustment

The ramp stow switch is adjusted using a 5/32 Allen wrench:

Clockwise, ramp in

Counterclockwise, ramp out

Use stow switch to set ramp stowed position. Then adjust **physical stop** to slightly contact the ramp arm.

