

Parking Assist Monitor System Initialization

Service Category General

Section Pre-Delivery Service

Market USA

Toyota Supports ASE Certification

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2015	Sienna	

Introduction

As a result of the removal of the Short Pin, the power source to the steering angle sensor is cut off. When the Short Pin is reinstalled, the Parking Assist Monitor System will be operative, but it cannot display guidelines to assist parking operation because the center position is not recognized by the steering angle sensor. Please initialize the Parking Assist Monitor System after installing the Short Pin during Pre-Delivery Service (PDS).

NOTE

Anytime the battery terminal has been disconnected, the Parking Assist Monitor System **MUST** be re-initialized.

Warranty Information


OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	-	-	-	-

Initialization Procedure

1. Start the engine.
2. Move the shift lever to the "R" (Reverse) position to confirm that the Parking Assist Monitor System is not initialized.

"System Initializing." appears on the rear view monitor as shown in Figure 1.

Figure 1.

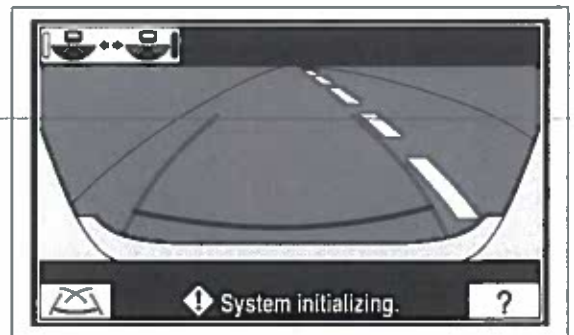

Parking Assist Monitor System Initialization

Initialization Procedure (Continued)

3. Move the shift lever to the "P" (Park) position. Turn the steering wheel lock to lock.
4. Move the shift lever to the "R" (Reverse) position and touch the parallel parking mode switch on the screen.
5. When the guidelines and *"Check surroundings for safety."* appear on the rear view monitor as illustrated in Figure 2, the initialization is complete.

Figure 2.

