

When changing the ambient temperature reading on a "Type A" (non-supervision) cluster from Celsius to Fahrenheit, or vice versa, do <u>NOT</u> follow the procedure included in the current 2014MY Soul Owner's Manual, instead, follow the revised procedure shown below:

- 1. Press the "TRIP" button (1) until the cluster readout displays the "RANGE" screen, as shown in image A.
- Next, press the "RESET" button (2) on the steering wheel five times (see image B). On the fifth press, hold the "RESET" button down for six seconds until the display changes to the desired temperature scale.



