



Countries: AUSTRALIA, BRAZIL, CANADA, UNITED STATES, PUERTO RICO, SOUTH AFRICA
Document ID: IK1600095
Availability: ISIS
Revision: 3
Major System: CAB / SLEEPER / HOOD
Created: 5/28/2008
Current Language: English
Last Modified: 3/12/2014
Other Languages: [Français](#), [Español](#),
Author: Patrick Gotschall
Viewed: 165

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 18	 39

Title: Work Surface Latch Jammed Replacement

Applies To: ProStar

DESCRIPTION

Latch on work surface is jammed and won't allow the work surface to be pulled out.

PARTS INFORMATION

Part #	Description
Southco part # MP-05-112-55	Replacement Latch

These parts are not in the PDC's. You must contact Southco directly:

Rob Scanlan
 Southco
 (815)338-2412
 P.O. Box 0116
 210 N. Brinton Lake Road
 Concordville, PA 19331-0116

RESOLUTION

1. Remove top drawer (figure 1) to get access to work surface latch.
2. Physically depress pawl (figure 2) on latch and hold while pulling work surface out.
3. Remove work surface from cabinet by pushing on both slide release levers and pulling out the work surface.

4. Replace latch on work surface and install back into cabinet.



Figure 1



Figure 2

 Hide Details

Feedback Information

Viewed: 164

Helpful: 18

Not Helpful: 39

No Feedback Found

Copyright © 2014 Navistar, Inc.