



Countries: CANADA, COLOMBIA, UNITED STATES, PUERTO RICO
Availability: ISIS, Bus ISIS, FleetISIS
Major System: STEERING SYSTEM
Current Language: English
Other Languages: [Français](#), [Español](#),
Viewed: 970

Document ID: IK0500008
Revision: 4
Created: 12/21/2006
Last Modified: 6/11/2014
Author: James Santos

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 85	 269

Title: Lubrication to the Intermediate Steering Column Upper U-Joint

Applies To: Model: 4200 4300 4400 7300 7400 7500 7600
 8500 8600

DESCRIPTION

Information from the field indicates that the upper u-joint on the intermediate steering column is not being lubricated during maintenance intervals.

SERVICE PROCEDURE

The u-joint is located near the power distribution center, on the left inner fender panel, as shown in [Figure 1](#). Sufficient grease should be inserted to purge the old grease so that clean new grease is visible at each u-joint trunnion. The steering column may need to be turned slightly to make the zerk fitting accessible ([Figure 2](#)).

For lubrication intervals refer to the Operator Manual for the model being serviced.

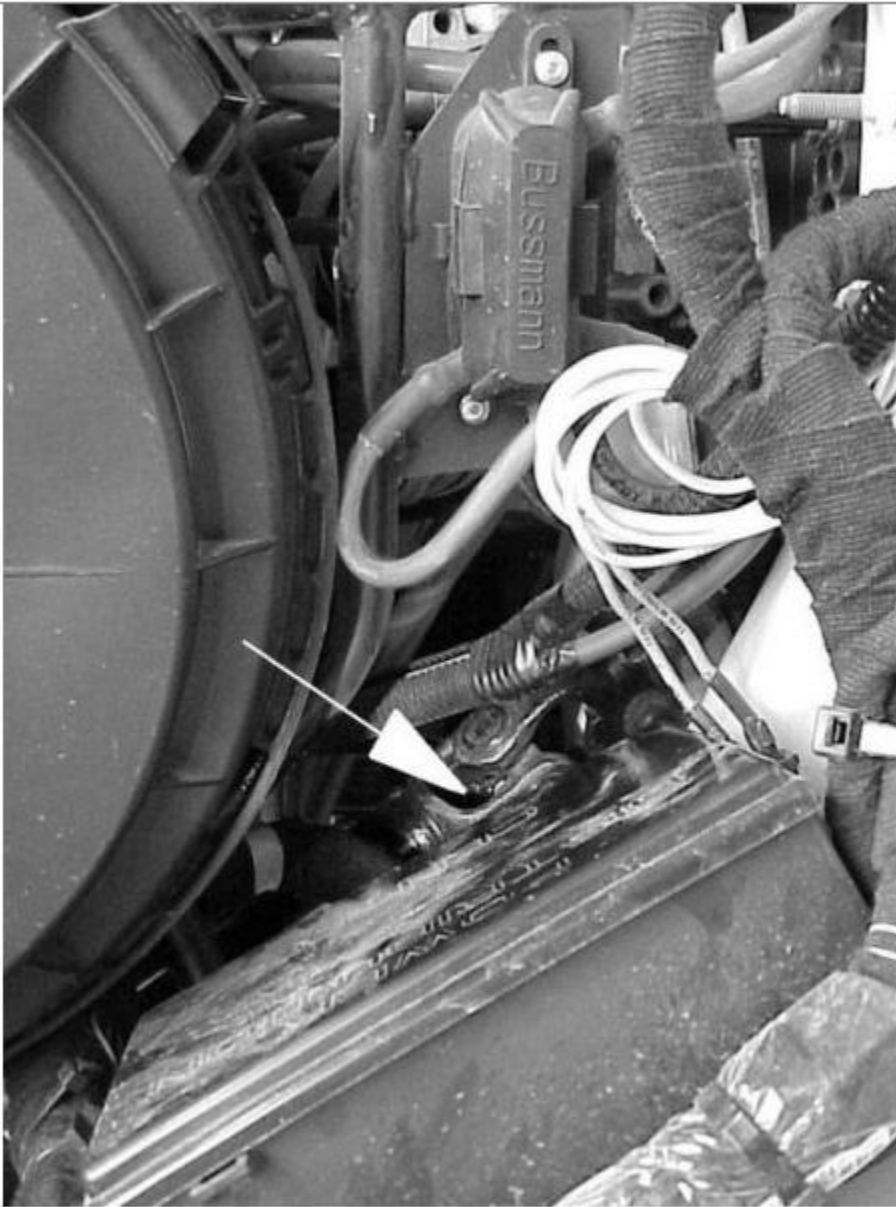


Figure 1. Location of Steering U-Joint

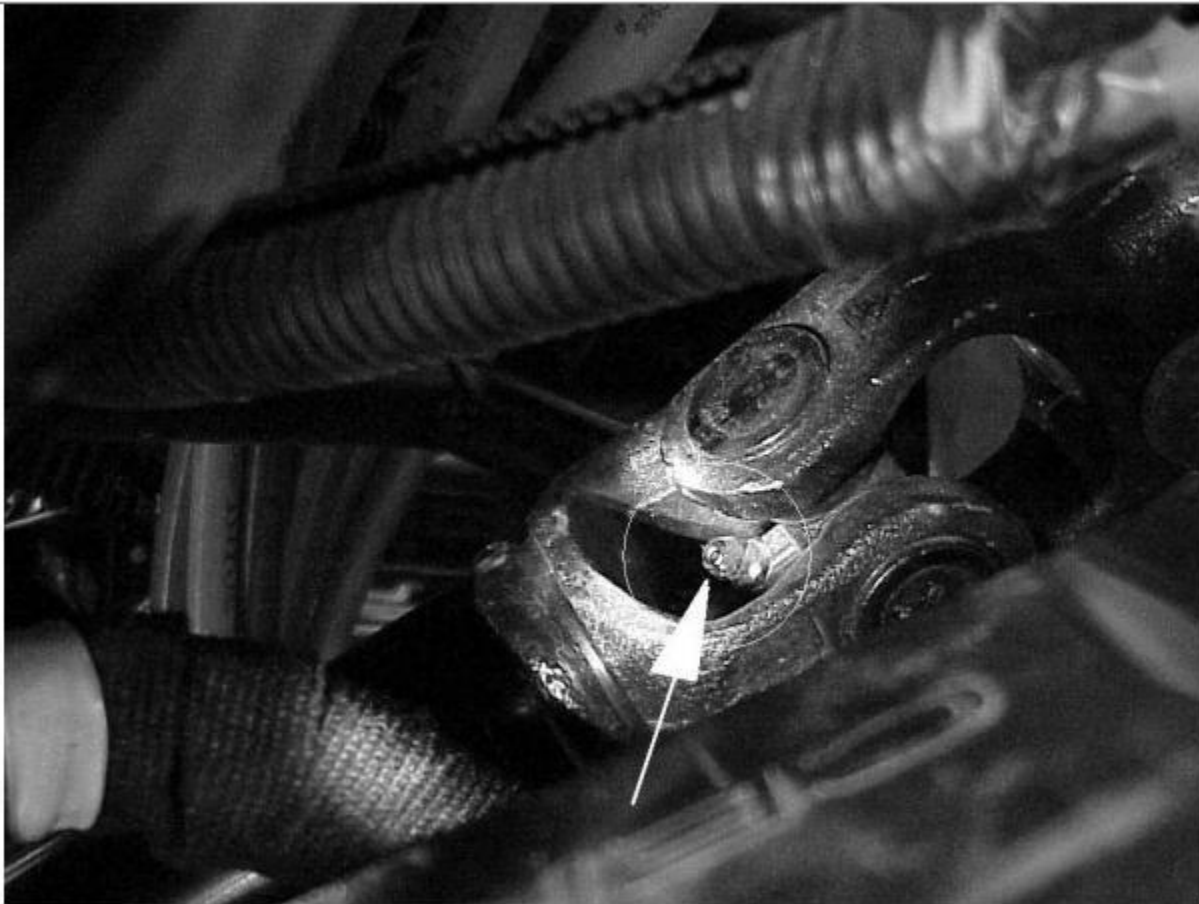


Figure 2. Arrow Indicates Zerk Fitting

TSI Number: 03-05-01

 Hide Details

Feedback Information

Viewed: 969

Helpful: 85

Not Helpful: 269

No Feedback Found

Copyright © 2014 Navistar, Inc.