



<b>Countries:</b>	AUSTRALIA, CANADA, COLOMBIA, UNITED STATES, PUERTO RICO, NEW ZEALAND	<b>Document ID:</b>	IK1900015
<b>Availability:</b>	ISIS, FleetISIS	<b>Revision:</b>	6
<b>Major System:</b>	ACCESSORIES	<b>Created:</b>	6/14/2007
<b>Current Language:</b>	English	<b>Last Modified:</b>	6/13/2014
<b>Other Languages:</b>	<a href="#">Français</a> , <a href="#">Español</a> ,	<b>Author:</b>	Chris Moody
<b>Viewed:</b>	3385		

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 <a href="#">View My Bookmarks</a>				 343	 420

**Title: ProStar Activate HVAC Front Blower Message In Dash Message Center**

**Applies To: All ProStar with Sleeper**

**DESCRIPTION**

If air conditioning is requested from the rear sleeper control panel and the front blower control is in the OFF position, a message will display on the cluster, Activate HVAC front blower. This message is intended to inform the driver to turn on the front AC blower to eliminate the possibility of the evaporator coil freezing while the rear AC is running.

**Changes to the rear blower motor operation.**

Vehicles built after 3/24/2011 with Kernel version of 231 or higher and for earlier built vehicles reprogrammed with Kernel version 231 or higher there has been a change in the rear blower motor operation. With the A/C on, and the FRONT blower motor on, the REAR blower motor will run on low speed if the rear blower switch is in the off position.

Hide Details

Feedback Information

Viewed:	3384
Helpful:	343
Not Helpful:	420
No Feedback Found	