



Countries: CANADA, COLOMBIA,
UNITED STATES,
PUERTO RICO

Availability: ISIS, FleetISIS

Major System: ACCESSORIES

Current Language: English

Other Languages: [Français](#), [Español](#),

Viewed: 2097

Document ID: IK1900019

Revision: 3

Created: 4/29/2007

Last Modified: 6/11/2014

Author: Chris Moody

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 195	 344

Title: ProStar Sleeper HVAC blower will not run on high with engine off

Applies To: ProStar Sleeper Cab

DESCRIPTION

The sleeper HVAC blower will not operate on high while the engine is not running. The engine must be running for the blower to operate on high.



Hide Details

Feedback Information

Viewed: 2096

Helpful: 195

Not Helpful: 344

No Feedback Found