



# Tech Tips

TT 90-14-01

Date: January 24, 2014

## 2013-2014 Beetle Turbo-Oil Temperature Gauge Operation

Be aware that the oil temperature gauge (if equipped) will not begin reading until oil temperature reaches approximately 120°F. Additionally, the gauge may appear to fluctuate or drop to 120° during engine warm up in the first 30 minutes of driving. The Oil Temperature display in the MFI may also sporadically show “---°F” during this warm up period. No repairs are recommended if operation is as described above.