Das Auto.

Technical Bulletin

Model(s)	Year	Eng. Code	Trans. Code	VIN Range From	VIN Range To
Touareg	2011-2014	All	All	All	All

Condition

48 14 06 November 19, 2014 **2038140** Supersedes Technical Bulletin V481404 dated September 3, 2014 to include additional content.

Vibrations in Steering Wheel

The customer may state:

1. Shimmy/rotational vibration in the steering wheel at constant speed.

Shimmy/rotational vibrations in the steering wheel at various speeds.

- 2. Shimmy/rotational vibrations in the steering wheel when braking.
- **3**. Vibration felt in the entire vehicle:

The vibration can be felt in the seat surfaces, in the underbody, in the foot well, or in the pedal.

The vibration is more prevalent when braking/accelerating.

Technical Background

Flatspots:

After a short stationary period (sometimes as little as a few hours) flat spots can develop after the warm tire has cooled down. The effect the flat spotted tire has on the vehicles performance depends on the type, dimension, make, and pressure of the tire.

Flat spots alter the radial force variation and must be driven out before balancing the wheel.

Effects of increased radial forces on the vehicle:

Increased radial forces on the front or rear tires cause vibrations in the vehicle.

Increased radial forces on the front tires amplified by braking can also lead to vibrations in the vehicle.

^{© 2014} Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



Explanations and definitions:





Radial force variation (RFV)

The radial force or wheel load is the force with which a tire is compressed (Figure 1) Tires have softer and stiffer areas along their circumference, which is illustrated using springs (Figure 1, A and B). Figure 1 shows the same tire at different points of rotation (A and B), as it rolls on level road with constant load (radial force).

iTip:

If this wheel rolls, the center of the wheel rises and falls X distance with a constant wheel load (illustration 1, arrow 1). This change in arrow 1 by X distance can be felt in the vehicle as vibration or shaking of the steering wheel.

Note:

The attached questionnaires must be filled out and submitted to the chassis team email box VWGoA.Chassis@vw.com and kept on file for warranty purposes.

Production Solution

No production change required.

Service

Procedure:

• Complete the following steps to eliminate vibrations (flat spots) and radial force fluctuations.

© 2014 Volkswagen Group of America, Inc.



Warm balancing / matching of wheels

1. Check all tires for the following points:

- Tread and side wall damage (for example: broken tread, impact damage/bubbles and so on).
- Tread depth.



The manufacturer recommends:

Replace tires damaged by external influences (for example impact damage/bubbles and so on). Damaged tires are an increased safety risk.

Replace tires with a tread depth of under 4 mm, otherwise this procedure will not be totally effective.

2. Check and correct the tire pressure of every wheel to at least 36 PSI or the permitted maximum specified value.

3. Perform a test drive of at least 18 miles, if possible on a highway, traffic and road conditions permitting over different speed ranges (up to 60 mph).

INote:

Make sure that you do not endanger yourself or others during the test drive.

During the test drive observe all traffic laws.

4. After the road test, raise the vehicle immediately and begin removing the wheels for balancing.

iTip:

New flat spots can develop during a short stationary period while the tires cool down so it is important to put the vehicle on the lift immediately following the test drive.

5. Balance the wheels on a stationary balancing machine.

iTip:

The manufacturer recommends to balance / road force the wheels on the -VAS 6230 A/B- Hunter machine.

Measure, balance and (if necessary) match the wheel according to the instructions of the equipment.

When tightening the wheel on the balancing machine make sure the contact surfaces of flange and wheel are clean, the wheel is correctly centered and a suitable cone and/or flange are used. We recommend the use of a five-finger flange.

^{© 2014} Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



INote:

The fluctuation of the radial force does not depend on the turning direction and is measured as the difference between maximum and minimum radial force (road force).

If the radial force cannot be reduced below the specified value of 26 lbs. by matching, replace the tire.

The wheels must be installed on the vehicle according to the instructions of the manufacturer and the repair manual.

Securing the wheel on the vehicle

INote:

This is the most sensitive and critical portion of the repair!

- Check whether the contact surfaces on the brake disc and wheel are free of corrosion and dirt, clean if necessary.
- Check whether the centering hole of the wheel and the centering of the hub are free of corrosion and dirt, clean if necessary.
- The wheels holes and the wheel bolts must be free of dirt and corrosion. It must be possible to lightly turn the wheel bolts by hand without using a tool.

Note:

Severely corroded or damaged bolts must be replaced according to the repair manual/ETKA.

• Make sure that the wheel bolts are the correct version and length.



Each wheel bolt hole is assigned a number from 1 to 5. These numbers will be referenced below. (Star pattern)

Figure 2

© 2014 Volkswagen Group of America, Inc.

Page 4 of 8



• Align the position of the brake disc holes/hub threads as shown in Figure 3 below.



Example of proper brake disc hole/hub thread positioning.

- The brake disc bolt should be in the 6 o'clock position as seen in the picture.
- Wheel bolt hole number 1 should be in the 12 o'clock position. See Figure 2 above for wheel bolt hole numbering.
- One of the three hub flanges should also be in the 12 o'clock position.

Figure 3

• The reason this position is important is the weight of the wheel must be supported in order for proper centering to occur. When the there is one of the hub flanges on top the weight of the wheel is supported while the wheel is secured in wheel bolt hole number 1.



Example of improper positioning.

Figure 4

© 2014 Volkswagen Group of America, Inc.

Page 5 of 8





Example of improper positioning.

Figure 5

- Insert the wheel on the hub and secure it loosely by hand it starting with wheel bolts number 1 and 2 (See figure 2 above 4).
- Screw in the remaining wheel bolts by hand in the star pattern specified in Figure 5. This will ensure precise centering of the wheel. Initially tighten the wheel bolts to 30 Nm.



Tighten all the wheel bolts in the star pattern specified in the picture.

Tighten the wheel bolts to the specified tightening torque with a torque wrench by hand.

Note:

Do not use a pneumatic impact gun to install the wheel bolts.

Figure 6

- Lower the vehicle until the tires just begin to touch the floor. Torque the bolts by hand to the specified value in ElsaPro using a torque wrench.
- Lower the vehicle to the floor.
- Ensure the correct vehicle-related tire pressure.
- Test drive the vehicle.
- Assess the vehicle again in the affected speed range.

© 2014 Volkswagen Group of America, Inc.

Page 6 of 8



iTip:

If the vibrations persist, call the helpline for further assistance. Before calling the helpline all steps in this bulletin must be completed and documented. Please be as specific as possible regarding the steps used and customer complaint when calling the helpline.

Warranty

To determine if this procedure is covered under Warranty, always refer to the Warranty Policies and Procedures Manual ¹⁾							
Model(s)	Yea	ar(s)	Eng. Code(s)	Trans. Code(s)	VIN Ran	ge From	VIN Range To
Touareg	Touareg 2011-2014		All	All	All		All
SAGA Coding							
Claim Type: Use applicable Claim Type			; ¹⁾				
Service Number:			Damage Code	HST		Damage Location (Depends on Service No.)	
4405			0013			Use applicable when indicated in ElsaWeb (L/R)	
Parts Manufacturer		Tou	Touareg		WWO ²⁾		
Labor Operation ³⁾ :							
Balance 2 wheels		44059400 = 50 TU					
Or							
Balance 4 wheels			44059404 = 90 TU				
Labor Operation ³⁾ :							
Clean 2 front wheel hubs			40643050 = 10 TU				
AND/OR							
Clean 2 rear wheel hubs			42683050 = 10 TU				

© 2014 Volkswagen Group of America, Inc.

Page 7 of 8



Causal Part: Select Labor Operation	on	4405940*		
	Diagnost	tic Time ⁴⁾		
GFF Time expenditure	01500000 = 00 TU max.		NO	
Road Test	01210002 = 10 TU		YES	
	01210004 = 10 TU			
Technical Diagnosis: Check all 01320000 = 10 TU max. tires:		J max.	YES	
Damage				
Tread depth				
Tire pressure				
Claim Comment: Input "As per Teo	chnical Bulletin 203	88140" in comment	section of Warranty Claim.	
¹⁾ Vehicle may be outside any War	ranty in which case	this Technical Bu	lletin is informational only	
²⁾ Code per warranty vendor code	policy.			
³⁾ Labor Time Units (TUs) are subject to change with ELSA updates.				
⁴⁾ Documentation required per Warranty Policy Procedures Manual.				

Required Parts and Tools

Part No:	Part Description	Quantity	
See ETKA	Wheel Weights	As required	

Tool Description	Tool No:
Wheel Balacing Machine	VAS 6230 A/B- Hunter
	Or equivalent

Additional Information

All part and service references provided in this Technical Bulletin are subject to change and/or removal. Always check with your Parts Dept. and Repair Manuals for the latest information.

© 2014 Volkswagen Group of America, Inc.

Page 8 of 8

Tire information sheet

1. Customer complaint

Be as specific as possible. Speed rate acceleration, vibrations (only) when br	nge, vibrations in corr aking or accelerating	nplete vehicle, vibratio , vibrations permaner	ons (only) in steering htly or from stop, etc.	wheel, during	
2. Vehicle data					
VIN number:	Veł	nicle delivery date	e:/	_/	
Mileage of affected tires:	Alleage of affected tires: Vehicle mileage:				
Urban/country/highway driving in %	6:/	/ Part	number of whee	l:	
3. Tire information (cold	condition)				
Wheels installed? Factory $\square \dots \lor$ Make of tire:	/W accessories]After Mark Tire type:	(et		
Dimension:	 Manufactur	er code:	(e.g.: AO,	AOE, R01)	
Make of balancing machine:	ake of balancing machine: Last calibration date of machine:				
	Front left	Front right	Rear left	Rear right	
DOT (last four digits mm-yy)					
Tyre pressure in bar					
Tire pressure according to label	correct	correct	correct	correct	
Tread depth in mm outside / center / inside					
Existing wheel weights					
Outer/inner balancing track (size)					
Damage on tire (yes/no)					
Damage on wheel (yes/no)					
 4. Tire information after the balancing Warm Balance (Conduct a test drive of at least 13 miles, at highway speeds (60 mph) if possible) 					
	Front left	Front right	Rear left	Rear right	
Tire pressure in bar					
Road force value in pounds (lbs) before matching					

*Road force values can be established with Hunter tester VAS 6230

Road force value in pounds (lbs) after

Missing weight per level/track

in gram outside/inside

matching

Vibrations, steering wheel vibrations and juddering

A test drive <u>with</u> the customer is necessary.					
Divide the complaint into the following symptoms:	VIN number:				
	FRED report number:				
The complaint occurs					
at the beginning of the journey and gradually eases or disap	pears altogether				
at constant speed the and remains while driving at that speed					
in acceleration and overrun and when pressing the clutch or in the N position					
in acceleration and overrun, but <u>not</u> when pressing the clutch or in the N position					
in acceleration and overrun. It involves a juddering/vibrating in driving direction					
with pressed clutch or position N at an engine speed	range of rpm to rpm.				
stronger when accelerating. Occurs in acceleration and over	run, but eases when the vehicle is put in N				
\square only when braking, whereby the pedal pressure is \square light, \square] medium, 🗌 strong				
when braking the complaint gets worse, when the pedal pres	ssure is 🗌 light, 🗌 medium, 🗌 strong				
The complaint can be felt in the*:					
🗌 driver or passenger seat, 🗌 steering wheel, 🗌 shifter lever, 🦳] pedal, 🗌 footwell, 🗌 centre console or tunnel, 🗌 rear seats.				
It involves*:					
🗌 vehicle vibrations, 🗌 steering wheel vibrations, 🗌] traction disruption, 🗌 juddering, 🗌 misfiring,				
humming or droning noises.					
Additional information*:					
\rightarrow speed of mph to mph	\rightarrow in which gears or driving modes:				
\rightarrow since when does the complaint occur?	(since x weeks, since vehicle purchase or tire change,)				
\rightarrow with summer or winter tires	*select all that apply				

