



Countries: AUSTRALIA, BRAZIL, CANADA, UNITED STATES, PUERTO RICO, SOUTH AFRICA
Document ID: IK0800056
Availability: ISIS
Revision: 4
Major System: ELECTRICAL SYSTEM
Created: 11/21/2006
Current Language: English
Last Modified: 2/5/2014
Other Languages: [Français](#), [Español](#),
Author: Chris Moody
Viewed: 1415

[Less Info](#)

Hide Details

Coding Information

| Copy Link | Copy Relative Link | Bookmark | Add to Favorites | Print | Provide Feedback | Helpful | Not Helpful |
|-----------|--------------------|---------------------------------------|------------------|-------|------------------|---------|-------------|
| | | View My Bookmarks | | | | 189 | 545 |

Title: Retrieving Fault Codes Through the Cluster Doesn't Work

Applies To: NGV vehicles, ProStar, LoneStar, WorkStar, TranStar, TerraStar, DuraStar

DESCRIPTION

The customer or dealer technician may not be able to read fault codes out through the Instrument cluster LCD. Instrument Panel (IP) Fault code retrieval on 2007 and newer products will require the customer to order the code below. If this code isn't ordered the driver/customer won't be able to retrieve fault codes without a tool. If the customer concern is related to reading faults through the cluster, check to see if the feature below was ordered.

- 16HKT IP CLUSTER DISPLAY On Board Diagnostics in Gauge Cluster
- Body Controller Feature 0595ANW

Hide Details

Feedback Information

| | |
|-------------------|------|
| Viewed: | 1414 |
| Helpful: | 189 |
| Not Helpful: | 545 |
| No Feedback Found | |