

**SUBJECT****One or Both Outside Mirror Turn Signals Do Not Operate****MODEL**

F15

SITUATION


When using the left or right turn signal, the turn signal light on the outside mirror does not operate.

CAUSE

The outside mirror light assembly has a pin pushed back and makes a bad contact.

PROCEDURE

Remove the outer mirror painted cover cap. Refer to ISTA REP 51 16 041 "Removing and installing/replacing cover cap on left or right exterior mirror". **Caution: when removing the cap make sure to pull it straight to prevent damage it.**

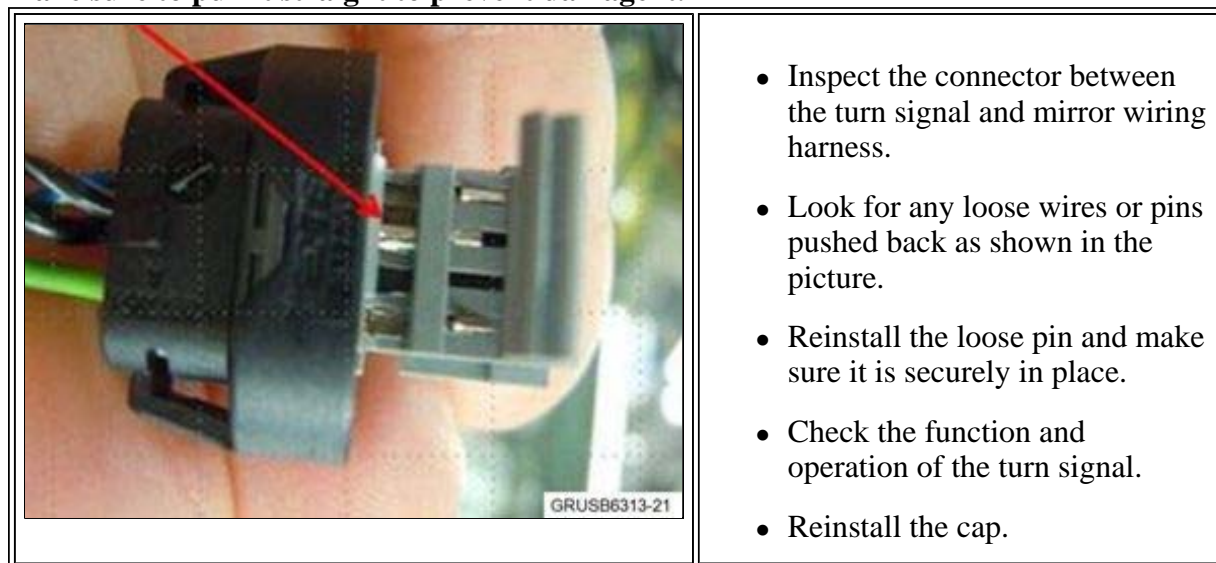

If no trouble can be found with the pins and the problem is still present, replace the outside mirror assembly.

WARRANTY INFORMATION

Not applicable.

[Copyright ©2014 BMW of North America, Inc.]