



SUBJECT**Vehicle Honks for 20 Seconds when Left in Neutral****MODEL**

F56 (Cooper, Cooper S)

With option 205 (Automatic Transmission) and option 322 (Comfort Access keyless entry)

SITUATION

When the customer leaves the vehicle (with the key) and closes the door, the vehicle honks for approximately 20 seconds.

Check Control messages “Ignition switched on” and “Vehicle can roll away! Shift to P”! are also displayed.

CAUSE

The vehicle’s **transmission was left in Neutral** and was not switched back to Park.

INFORMATION

This is normal vehicle operation if the customer leaves the vehicle (with the key in pocket) in Neutral without being shifted into Park.

The honking noise notifies the customer that if the **shifter is not put into Park position**, the vehicle will roll away or, if left alone for longer periods, have a discharged battery.

Please refer to the attached information sheet for further information. Additional information may be found in the Owner’s Manual for the vehicle.

ATTACHMENTS

View PDF attachment [M610414 Flyer](#).

[Copyright ©2014 BMW of North America, Inc.]