



SERVICE BULLETIN

Classification: EL14-040	Reference: NTB14-081	Date: August 27, 2014
-----------------------------	-------------------------	--------------------------

AUTOMATIC DOOR UNLOCK SETTINGS

APPLIED VEHICLES: 2014 Frontier (D40)
2014 Xterra (N50)
2014 Titan (A60)
2014 Armada (TA60)

SERVICE INFORMATION

The Applied Vehicles above are equipped with the following features:

Automatic Door Lock:

- All doors lock automatically when the vehicle speed reaches 15 MPH (24 km/h).

Automatic Door Unlock:

- All doors unlock automatically when the ignition is placed in the OFF position (models with Intelligent Key system) or when the key is removed from the ignition switch (models without Intelligent Key system).
or
All doors unlock when the automatic transmission is placed in the Park position.
- **This feature can be deactivated.**

IMPORTANT: Before performing any repairs on the automatic door lock/unlock system.


- Review the operation of the system in the Owner's Manual (Section 3; Pre-driving checks and adjustments → Doors → Automatic Door Locks).
- Make sure the customer understands how the system operates.
- Make sure the system is set as preferred (**activated or deactivated**).

NOTE: Steps to activate or deactivate the automatic door unlock are listed on the next page.

Nissan Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. NOTE: If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Nissan dealer to determine if this applies to your vehicle.

Setting the Automatic Door Unlock (activate or deactivate)

1. Close all the doors.
2. Turn the ignition to ON.
3. Within 20 seconds, hold the unlock button (on the main door switch) to the UNLOCK position for more than 5 Seconds.
 - When activated, the hazard indicator will flash twice.
 - When deactivated, the hazard indicator will flash once.

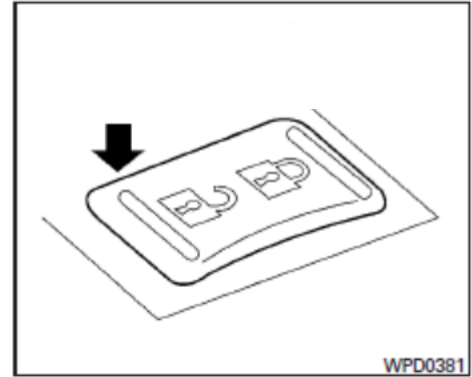

NOTE:

- The ignition switch must be cycled OFF, wait 30 seconds, and then ON between each setting change.
 - When the automatic door unlock system is deactivated, the doors do not unlock automatically.
 - To unlock a door manually, use the inside lock knob or the power door lock switch (driver's or front passenger's side).
-