



SB-10055134-3374

Countries: CANADA, UNITED STATES, PUERTO RICO
 Availability: ISIS
 Major System: BRAKES
 Current Language: English
 Other Languages: [Français](#), [Español](#)
 Viewed: 235
 Document ID: IK0400023
 Revision: 3
 Created: 5/22/2007
 Last Modified: 3/11/2014
 Author: James Santos

[Less Info](#)

Hide Details

Coding Information

Copy Link Copy Relative Link Bookmark Add to Favorites Print Provide Feedback Helpful Not Helpful

31 59

Title: ProStar Wabco Brake Control Fuse Specification


Applies To: 2007 - 2008 ProStar with Wabco Brakes Controller

Problem:

ProStar with Wabco brake controller may have the fuse labeled as 30 Amp fuse.

Resolution:

Vehicles with Wabco Brake Controller should only have a 15 amp fuse in the F8- B location as shown in Figure 1. Vehicles with the Bendix Brake Controller have a 30 Amp fuse in this location.

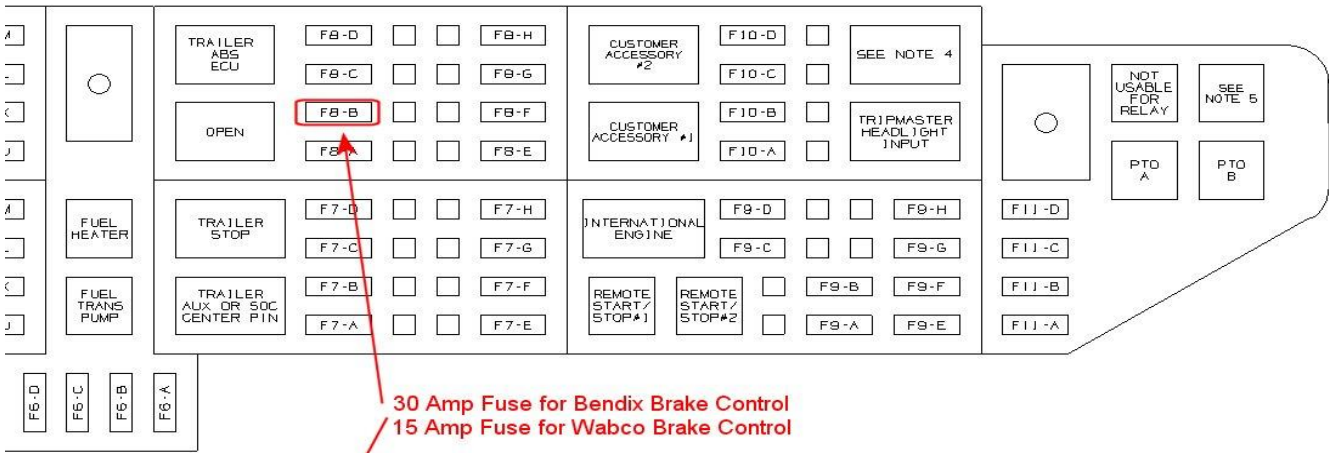

30 Amp Fuse for Bendix Brake Control
 15 Amp Fuse for Wabco Brake Control

	LOCATION	AMP	IGN	STD/OPT	DESCRIPTION	LOCATION	AMP	IGN	STD/OPT	DESCRIPTION
	F5-J	10	IGN	OPT	SATELLITE COMMUNICATION	F8-D	30	BTRY	STD	TRAILER ABS ECU
	F5-K	15	IGN	STD	AIR DRYER	F8-E	15	BTRY	OPT	SKIRT LIGHTING
	F5-L	--	IGN	--	OPEN	F8-F	30	BTRY	OPT	TRANSMISSION (NOTE 3)
	F5-M	10	IGN	STD	BACK-UP LIGHTS	F8-G	--	--	--	OPEN
	F6-A	30	BTRY	STD	CAB HVAC BLOWER MOTOR	F8-H	30	BTRY	STD	ENGINE ECU
	F6-B	--	--	--	OPEN	F9-A	30	BTRY	OPT	POWER WINDOW/DOOR DRIVER
SURE	F6-C	10	BTRY	OPT	FUEL TRANSFER PUMP	F9-B	7.5	IGN	OPT	ICON
	F6-D	20	BTRY	OPT	FUEL HEATER	F9-C	--	--	--	OPEN
N/ICON	F7-A	30	BTRY	NOTE 2	SLEEPER FUSE PANEL FEED	F9-D	20	BTRY	OPT	INTERNATIONAL ENGINE ECM RELAY
M	F7-B	NOTE 7	BTRY	OPT	TRLR SOC-AUX OR SWITCHED CENTER PIN	F9-E	30	BTRY	OPT	POWER WINDOW/DOOR-PASSENGER
	F7-C	--	--	--	OPEN	F9-F	--	--	--	OPEN
	F7-D	30	BTRY	STD	TRAILER STOP	F9-G	20	BTRY	OPT	INTERNATIONAL ENGINE
	F7-E	30	BTRY	NOTE 2	SLEEPER HVAC BLOWER	F9-H	--	--	--	OPEN
	F7-F	15	BTRY	OPT	WORK LIGHTS, CUSTOMER SUPPLIED	F10-A	--	--	--	OPEN
W/ICON	F7-G	--	--	--	OPEN	F10-B	30	BTRY	OPT	CUSTOMER ACCESSORY #1
	F7-H	30	BTRY	NOTE 2	SLEEPER FUSE PANEL FEED	F10-C	--	--	--	OPEN
	F8-A	10	BTRY	OPT	VEHICLE SENSOR MODULE	F10-D	NOTE 8	BTRY	OPT	CUSTOMER ACCESSORY # 2 OR ICON
	F8-B	30	BTRY	STD	TRACTOR ABS ECU	F11-A	5	BTRY	OPT	CUSTOMER ACCESSORY SWITCH FEED
	F8-C	--	--	--	OPEN	F11-B	5	BTRY	OPT	DRIVER DISPLAY/SECONDARY DISPLAY
						F11-C	5	BTRY	OPT	ICON
						F11-D	5	IGN	STD	TRACTOR ABS ECU

Hide Details

Feedback Information

Viewed: 234
 Helpful: 31
 Not Helpful: 59

No Feedback Found