

FLA COE
FLB COE
FLD Conventional
Business Class
FLC 112 Conventional

Century Class Conventional
Argosy COE
Cargo
Columbia

112SD and Coronado
> Business Class M2
> Cascadia
> 108SD/114SD

**Freightliner
Service Bulletin**

General Information

A guard is available to protect fuel level sending units and associated wiring (p/n 06-76443-000) . Refer to the instructions in this bulletin to install the guard.

Fuel Level Sender Guard Installation

1. Set the parking brakes and chock the tires.
2. Remove two of the five fuel level sender mounting screws. Make sure that the two screws removed are horizontally aligned, and will allow for the lip of the guard to be oriented away from the vehicle. See [Fig. 1](#).

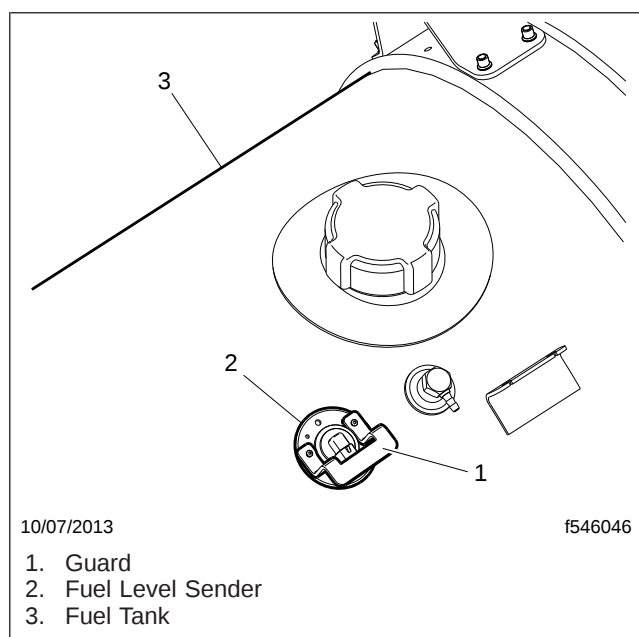


Fig. 1, Fuel Level Sender Guard Installation

3. Position the fuel level sender guard on the fuel tank.
4. Install the two screws and tighten them securely.

Warranty

This is an informational bulletin only. Warranty does not apply.