


Tech Tips

TT 96-14-01

Date: January 17, 2014

2013-2014 Beetle, Beetle Convertible. With HID headlights

For vehicles with HID headlights, the headlight range can be manually adjusted to the vehicle loading condition once the low beams are switched on (Figure 1, adjustment knob 2). This feature helps ensure proper aiming of the vehicle headlights.

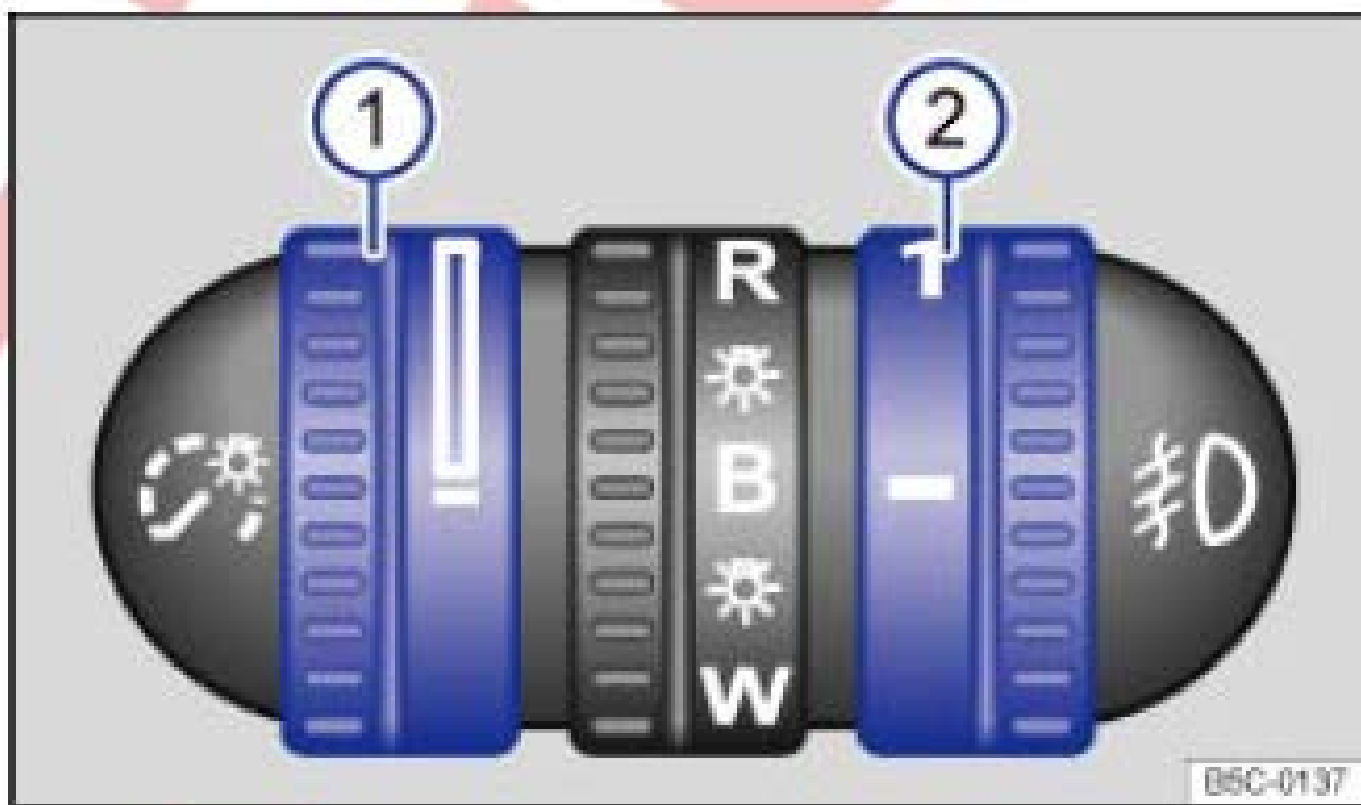

For additional information, see the owner's manual under "Instrument panel lighting and headlight range adjustment".