


# Amerivan Toyota Ramp

EIDorado  
National - Kansas

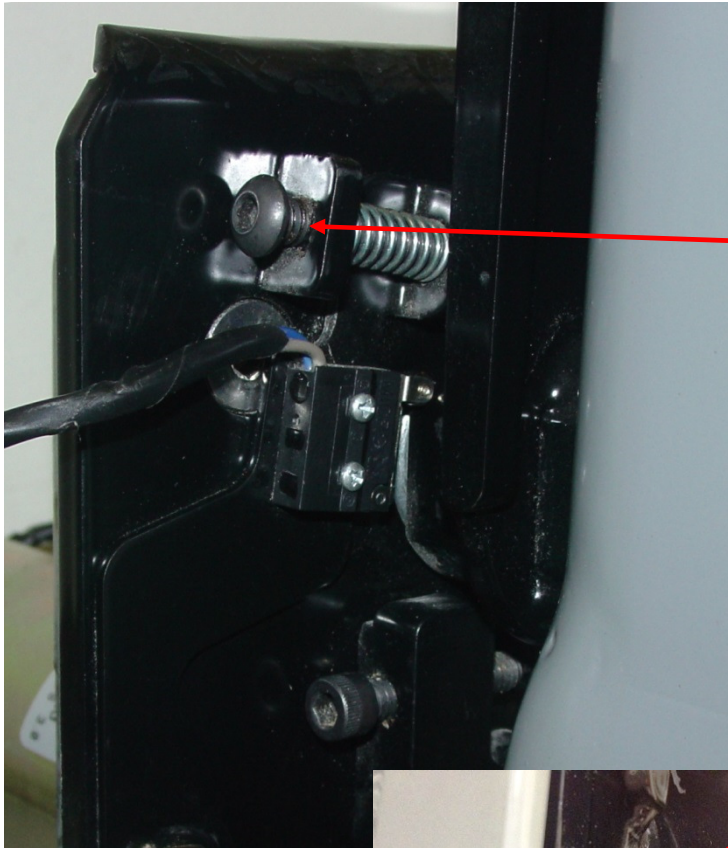

## Ramp Stow position Adjustment

The ramp stow switch is adjusted using a 5/32 Allen wrench:

***Clockwise***, ramp out

***Counter-clockwise***, ramp in

Use stow switch to set ramp stowed position. Then adjust ***physical stop*** to slightly contact the ramp arm.

