

Inspection

1. Look at the tailgate button on the remote.
2. Pilot SE should have a button that **DOES NOT** say HOLD.
3. Pilot EX-L should have a button that says HOLD .
4. If the remote is correct you are done.
5. If the remote is not correct continue on the page.



Pilot SE




Pilot EX-L

Keyless remote replacement

1. Remove the screw from the back of the immobilizer key.
2. Remove the back cover from the immobilizer key.
3. Remove the keyless from the key.
4. Install the new keyless remote in the reverse order of removal.

Part Number for EX-L 72147-SZA-A32

Part Number for SE 72147-SZA-A04

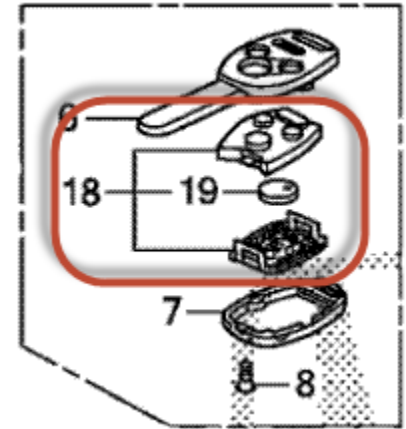

Register new keys and the original valet key by performing “All Keys are Lost” function

1. Prepare all new keys and have the immobilizer PCM code.
2. Connect the HDS to the data link connector.
3. Turn the ignition switch to ON (II).
4. Select IMMOBI from the SYSTEM SELECTION MENU.
5. Select IMMOBILIZER SETUP.
6. Select Add and Delete keys, then ALL KEYS LOST.
7. Do the registration according to the instruction on the HDS screen.
8. Check if the engine can be started by all the registered keys and if the door locks operate using the immobilizer key transmitter.