



AUSTRALIA, BAHAMAS, BOLIVIA, BRAZIL, BELIZE, CANADA, CHILE, TAIWAN, COLOMBIA, COSTA RICA, DOMINICAN REPUBLIC, ECUADOR, EL SALVADOR, TRINIDAD AND TOBAGO, UNITED STATES, URUGUAY, VENEZUELA, MEXICO, ARUBA, NICARAGUA, PERU, PUERTO RICO, Curaçao, GUAM, GUATEMALA, GUYANA, HAITI, HONDURAS, JAMAICA, KOREA, SOUTH KOREA, PANAMA, SOUTH AFRICA

Countries:

Availability: ISIS, Bus ISIS, FleetISIS

Major System: ENGINES

Current Language: English

Other Languages: [Français](#), [Español](#).

Viewed: 3576

Document ID: IK1200069

Revision: 4

Created: 2/28/2007

Last Modified: 11/24/2015

Author: Ryan Hendrickson

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 1082	 529

Title: Engine Won't Shut Off with the Key 5 amp Fuse Blowing**Applies To:** International I6 and V8 EGR (DLC II) engines

11/24/2015 Changed coding so article is available to non dealers

DESCRIPTION

If you get a complaint that the engine won't shut off with the key, check the 5 amp ECM ignition fuse in the power distribution center under the hood. If that fuse is blown, you need to change the IDM. The IDM has shorted internally and is backfeeding power to the ignition circuit.

Hide Details

Feedback Information

Viewed: 3575
Helpful: 1082
Not Helpful: 529

No Feedback Found