



Countries: BAHAMAS, BOLIVIA, BELIZE, CANADA, CHILE, TAIWAN, COLOMBIA, COSTA RICA, DOMINICAN REPUBLIC, ECUADOR, EL SALVADOR, TRINIDAD AND TOBAGO, UNITED STATES, URUGUAY, VENEZUELA, ARUBA, NICARAGUA, PERU, PUERTO RICO, Curaçao, GUAM, GUATEMALA, GUYANA, HAITI, HONDURAS, JAMAICA, KOREA, SOUTH KOREA, PANAMA

Document ID: IK1200283

Availability: ISIS, FleetSIS

Revision: 4

Major System: ENGINES

Created: 6/19/2008

Current Language: English

Last Modified: 10/21/2015

Other Languages: [Français](#), [Español](#).

Author: Jon Pierce

Viewed: 5544

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 671	Not Helpful 809
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	---------------------------	-------------------------------

Title: 6020M - MaxxForce Engine ECM Connector - Replacing Terminals

Applies To: All MaxxForce engines.

Change Log

Please refer to the change log text box below for recent changes to this article:

10/21/2015 - Updated keyword search based on dealer feedback

Description

Replacing terminals on the ECM MaxxForce 6020M connector.

Parts Information

Part #	Description	Qty
3612247C1	6020M connector body	1
3612250C1	Latching Cover	1
3612248C1	Connector lock #1	1
3612249C1	Connector lock #2	1
3613275C1	14 ga. Terminal	1
3612254C1	18 ga. terminal	1
3612253C1	Plug	1

Procedure

For instructions on replacing terminals in this connector, click on the links below:

- [Instructions 1](#)
- [Instructions 2](#)

Circuit Diagrams

- See electrical circuit book [S08322](#) and [0000003601](#)



Hide Details

Feedback Information

Viewed: 5543

Helpful: 671

Not Helpful: 809

No Feedback Found