



Countries: AUSTRALIA, BAHAMAS, BOLIVIA, BRAZIL, BELIZE, CANADA, CHILE, TAIWAN, COLOMBIA, COSTA RICA, DOMINICAN REPUBLIC, ECUADOR, EL SALVADOR, TRINIDAD AND TOBAGO, UNITED STATES, URUGUAY, VENEZUELA, MEXICO, ARUBA, NICARAGUA, PERU, PUERTO RICO, Curaçao, GUAM, GUATEMALA, GUYANA, HAITI, HONDURAS, JAMAICA, KOREA, SOUTH KOREA, PANAMA

Document ID: IK1200481

Availability: ISIS, Bus ISIS, FleetSIS

Revision: 13

Major System: ENGINES

Created: 4/2/2010

Current Language: English

Last Modified: 10/9/2015

Other Languages: [Français](#), [Español](#).

Author: Dominic Venice

Viewed: 21702

[Less Info](#)
[Hide Details](#)

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		View My Bookmarks				2456	1788

Title: Aftertreatment Soot Level Reset after AFI, DPF or DOC Cleaning or Replacement

Applies To: EPA 07 MaxxForce® 11 & 13L Engines

CHANGE LOG

Dealers: Please refer to the change log text box below for recent changes to this article:

10/09/2015 - Added French and Spanish translations.
 10/06/2015 - Updated Screenshot to show the Programming session is what you go to for reset request instead of Aftertreatment session.
 05/22/2015 - Australia was added to the country coding.
 04/09/2015 - Author updated for feedback purposes. Modified format. Added "ONLY EPA 2007 MaxxForce 11, 13L Engines" to description.
 9/18/14 - Updated format

DESCRIPTION

The soot level accumulator must be reset in the After Treatment Control Module (ACM) when one of the following aftertreatment components have been cleaned or replaced on **ONLY** EPA 2007 MaxxForce 11, 13L Engines:

- Diesel Particulate Filter (DPF) new or has been cleaned
- Diesel Oxidation Catalyst (DOC) new or has been cleaned
- EPA 07 MaxxForce 11 & 13L Engines Only - AFI cleaned or replaced

SERVICE PROCEDURE

After the DOC and/or the DPF been cleaned or replaced follow the process below to reset the soot level:

1. Connect ServiceMaxx® to the vehicle.
2. Top Menu Go to Sessions (Figure 1).
3. Select Programming (Figure 1).
4. Select Service Interval Tab (Figure 2 -1).
5. Select Parameter - Aftertreatment Reset Request (Figure 2 -2).
6. Use Chart 1 to make the proper reset choice based on component and action
7. Select the choice from the drop down in the value field next to the parameter name (Figure 2- 3)
8. Select Program Engine after the selected reset choice has been made (Figure 2-4).

Chart 1:

Component	Action	ServiceMaxx® Choice
Diesel Particulate Filter (DPF)	Cleaned	DPF Cleaned

After Treatment Fuel Injector (AFI)	Cleaned or Replaced	New or Cleaned AFT Fuel Injector
Diesel Particulate Filter (DPF)	New Replaced	New DPF Installed
Diesel Oxidation Catalyst (DOC)	New Replaced or Cleaned	New or Cleaned DOC

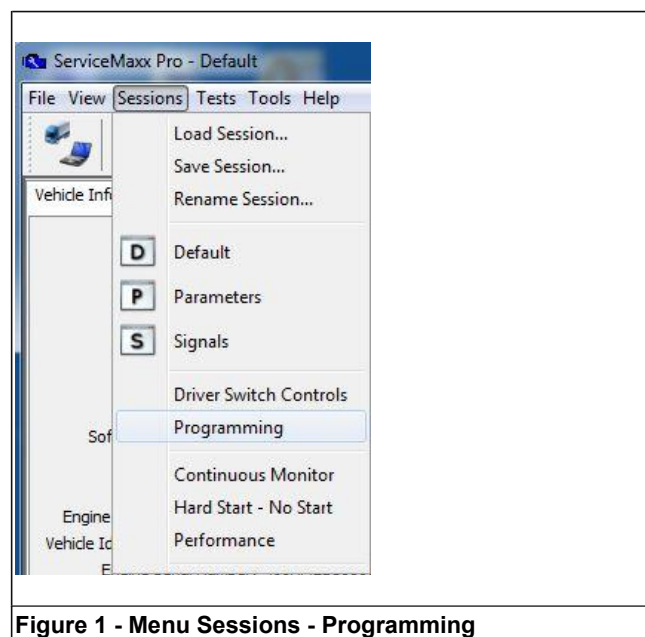


Figure 1 - Menu Sessions - Programming

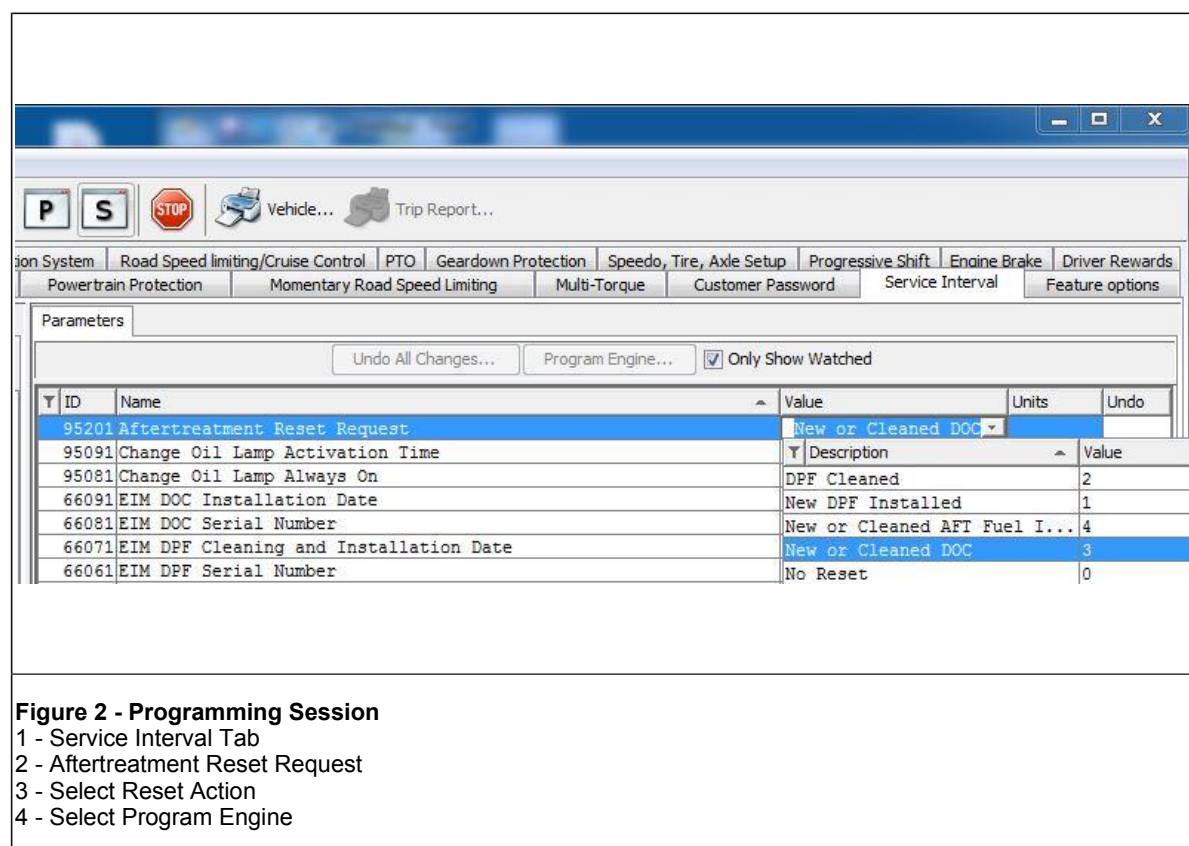


Figure 2 - Programming Session

- 1 - Service Interval Tab
- 2 - Aftertreatment Reset Request
- 3 - Select Reset Action
- 4 - Select Program Engine

 Hide Details

Feedback Information

Viewed: 21701

Helpful: 2456

Not Helpful: 1788

No Feedback Found

Copyright © 2015 Navistar, Inc.