



Countries: **Document ID:** IK2500218
Availability: **Revision:** 0
Major System: UPTIME **Created:** 4/22/2015
Current Language: English **Last Modified:** 4/22/2015
Other Languages: NONE **Author:** Jim Galambos
Viewed: 42

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 0	Not Helpful 0
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	-------------------------	-----------------------------

Title: Haldex Brake Slack Adjuster Replacement - 1

Applies To: Vehicles Marked in the Service Portal

DESCRIPTION

Certain ProStar® models it maybe necessary to replace the brake slack adjusters, this article will guide the user through this activity.

SERVICE PART(S) INFORMATION

Kit Description	Part Number	Quantity Required	Ordering Instructions
ADJUSTER BRK SLACK-KIT W/BRKT	HAL40010141	4	Order from Navistar
ADJUSTER BRK SLACK KIT W/BRCKT	HAL40010086	2	Order from Navistar

REPAIR STEP(s)

WARNING! To prevent property damage, personal injury, and / or death, park vehicle on a hard, flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.

WARNING! To prevent property damage, personal injury, and / or death, if the vehicle must be raised, do not work under the vehicle supported only by jacks. Jacks can slip or fall over.

WARNING! To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.

WARNING! To prevent property damage, personal injury, and / or death, keep flames or sparks away from vehicle and do not smoke while servicing the vehicle's batteries. Batteries expel explosive gases.

WARNING! To prevent property damage, personal injury, and / or death, remove the ground cable from the negative terminal of the battery box before disconnecting any electrical components. Always connect the ground cable last.

1. Park vehicle on a flat, level surface.
2. Place transmission in Neutral (or Park, if automatic transmission).
3. Set parking brake.
4. Turn off ignition.
5. Install wheel chocks.
6. Disconnect negative battery terminal from battery.
7. Detailed Steps for removal and installation use this [Document](#).
8. Connect negative battery cable.
9. Remove wheel chocks.

WARRANTY INFORMATION

Standard Repair Time(s)

SRT	Description	Hours
A-40-15633 -1	Slack Adjuster Replacement	2.8

 Hide Details

Feedback Information

Viewed: 41
 Helpful: 0
 Not Helpful: 0

No Feedback Found

Copyright © 2015 Navistar, Inc.