## 2016 Volkswagen *Jetta Hybrid* Maintenance Schedule For USA 1.4L Hybrid Engine



	4.016	0.01/	0.01/	1014	501/	0.017	701/	0.01/	001	4001/	4401	1001/	10010	4.4016	45016
Miles	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K	130K	140K	150K
	r	r													
Air filter element and snow filter: Replace and clean housing (Every 6 years regardless of mileage)						6						6			
Battery: Check		Х		Х		Х		Х		Х		Х		Х	
Body: Visual inspection for corrosion				Х				Х				Х			
Brake pads: Check thickness and brake disc condition. Look for contact pattern and corrosion of brake discs (front and rear)	х		x		x		x		х		x		x		х
Brakes: Inspect brake system and shock absorber for leaks and damage, check thickness of brake pads, brake disc condition front and rear. Look for contact pattern and corrosion of brake discs, and check brake fluid level subject to abrasion		x		x		x		x		x		X		x	
Brake fluid and clutch unit: Change fluid (Every 3 years regardless of mileage and every 2 years after)			3		3		3		3		3		3		3
Coolant level and frost protection: Check				Х				Х				Х			
CV joints: Check for leaks and damage				Х				Х				Х			
Dust and pollen filter: Replace (Every 2 years or 40,000 miles)				1				1				1			
Engine: Change oil and replace oil filter	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х
Engine and engine compartment components: Check (from above) for leaks and damage				X				Х				Х			
Engine and engine compartment components: Check <b>(from</b> <b>below)</b> for leaks and damage, check transmission, final drive, and drive shaft boots				x				x				x			
Exhaust system: Check for leaks, damage and secure fittings				Х				Х				Х			
Headlights: Check adjustment				Х				Х				Х			
Hybrid components: Perform a visual inspection of high voltage components and the lines in the engine compartment and the rear of the vehicle for damage	х	x	х	x	х	x	x	x	Х	x	x	Х	x	х	X

## 2016 Volkswagen *Jetta Hybrid* Maintenance Schedule For USA 1.4L Hybrid Engine



Miles	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K	130K	140K	150K
inites	IUK	201	301	401	<b>30</b> K	UUN	700	our	301	TUUK	TIUK	1201	ISUK	1401	1300
Interior lighting and glove box lights, cigarette lighter / power outlets, horn, and all warning lamps: Check				x				x				х			
Lighting: Front and rear lights, luggage compartment lighting, turn signals, hazard warning lights: Check				Х				x				х			
Power steering: Check oil level				Х				Х				Х			
Ribbed belt: Check condition (if applicable)				Х				Х				Х			
Service interval display: Reset	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	X
Spark plugs: Replace				4				4				4			
Sunroof and panoramic sunroof: Check, clean, and lubricate (if applicable)				X				x				x			
Sunroof: Open sunroof and check front water drains and clean if necessary (if applicable)				Х				x				х			
Test drive: Check braking, kickdown, steering, electrical, heating and ventilation systems, air conditioning, handling, and parking brake				x				x				x			
Tie rod ends: Check for excessive play and looseness, check boots				X				x				Х			
Timing belt: Check (if replacement is not necessary, perform check every 20,000 miles after until replacement is necessary)															x
Timing belt for coolant pump: Check (if replacement is not necessary, perform check every 20,000 miles after until replacement is necessary)															x
Tires: Check tread depth, condition, wear pattern and pressure of all tires ( <b>including spare)</b>		х		X		Х		X		x		х		X	
Tire mobility kit: Check and observe expiration date on the tire filler bottle (Every 2 years regardless of mileage)		2		2		2		2		2		2		2	
Tire mobility kit: Replace tire filler bottle (Every 4 years regardless of mileage)				5				5				5			

## 2016 Volkswagen *Jetta Hybrid* Maintenance Schedule For USA 1.4L Hybrid Engine



Miles	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K	130K	140K	150K
Underbody sealant: Inspect for damage				X				Х				X			
Windshield washers, headlight cleaning system, and wiper blades: Check for damage and function, Check fluid level and add if necessary	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

- 1. Every 2 years or 40,000 miles: Dust and pollen filter: Replace (if applicable)
- 2. Every 2 years, regardless of mileage: Tire filler bottle in the tire mobility kit: Check (observe expiration date) (if applicable)
- 3. At the 3 year mark, then every 2 years regardless of miles driven: Brake fluid and clutch unit: Replace fluid
- 4. Every 4 year, regardless of mileage: Replace spark plugs
- 5. Every 4 years, regardless of mileage: Tire filler bottle in the tire mobility set: Replace (Observe expiration date)
- 6. Every 6 years regardless of mileage: Air filter element and snow filter: Replace element and clean screen and housing (if applicable)

## © 2015 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

Posted: August 2015