

D/C Cut Fuse Installation During PDS

Service

Category General

Section Pre-Delivery Service

Market USA



Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2016	Mirai	

Introduction

The D/C Cut Fuse (30A) has been removed at the assembly plant to reduce parasitic current draw in transit and storage. The removed D/C Cut Fuse (30A) is stored in the blank space of the relay block in the engine compartment. The D/C Cut Fuse (30A) must be reinstalled in the original location during PDS (Pre-Delivery Service).

Warranty Information


OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	_	-	-	_

D/C Cut Fuse Installation During PDS

Introduction

1. Remove the D/C Cut Fuse (30A) from the blank space of the relay block in the engine compartment and install the D/C Cut Fuse (30A) in the relay block as shown.

Figure 1

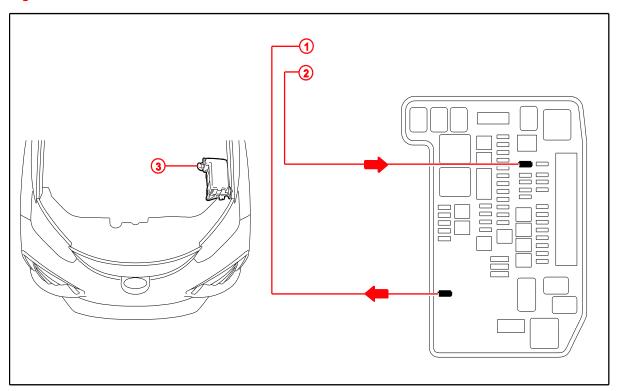

1	Remove This D/C Cut Fuse (30A
2	Install D/C Cut Fuse (30A) Here (Original Location)

3 Main Relay Block