

# DCC Fuse Installation During PDS

**Service Category** General

**Section** Pre-Delivery Service

**Market** USA

Lexus Supports  
ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2016	IS200T, IS300, IS350	

## Introduction

To minimize battery discharge during transportation and storage, the DCC fuse (30A) has been removed at the assembly plant and temporarily stored in the blank space of the fuse block in the engine compartment.

During Pre-Delivery Service (PDS), reinstall the DCC fuse into its original location.

## Warranty Information


OP CODE	DESCRIPTION	TIME	OFFP	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

## DCC Fuse Installation During PDS

### Installation Procedure

Remove the DCC fuse (30A) from the blank space of the fuse block in the engine compartment and install it in the location shown in Figure 1 during Pre-Delivery Service (PDS).

**Figure 1**

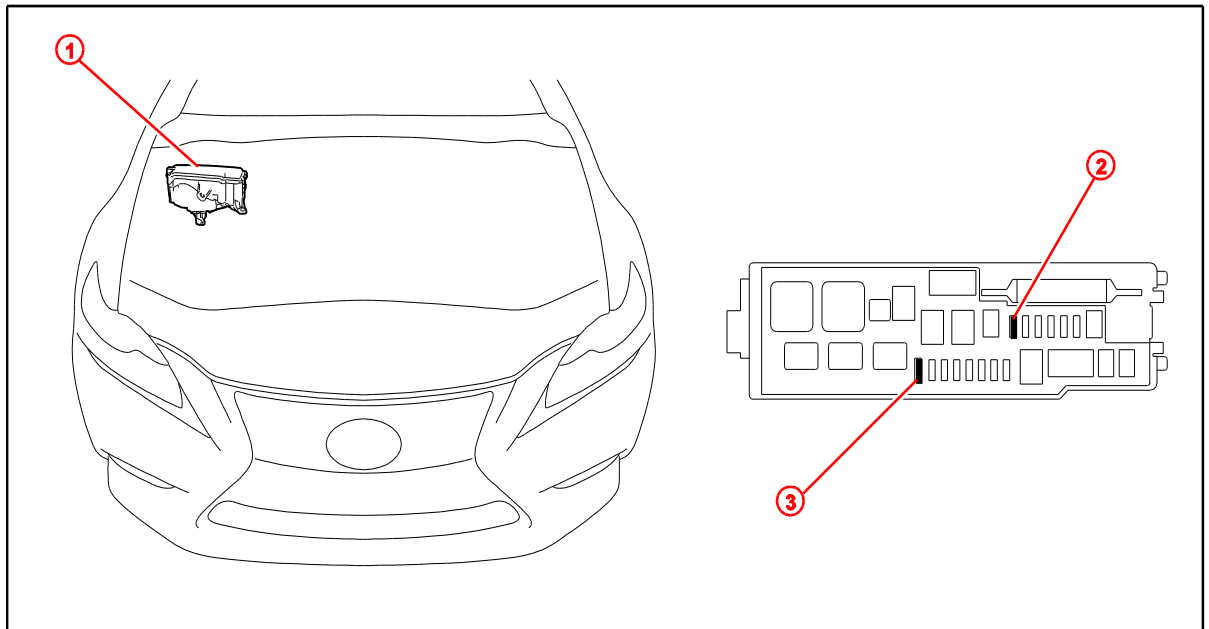

<b>1</b>	Relay Block
<b>2</b>	Install DCC Fuse (Original Location)

<b>3</b>	Remove This DCC Fuse
----------	----------------------

#### **NOTE**

- Removing the DCC fuse cuts OFF power sources relating to the DOME and MPX-B.
- While the vehicle is stored at the dealership, disconnect the negative (-) battery terminal to prevent battery discharge. Refer to Service Bulletin No. [PG001-06](#), "Battery Maintenance for In-Stock Vehicles & Pre-Delivery."