

Subject

How to Enable iPhone Text Messages on Multimedia Display

Market

USA

Service Category

Audio/Visual/Telematics

Section

Cellular Communication

Applicability

All models with Bluetooth

Y FOR APPLICABLE VEHICLES

2012-2016	Camry	2013-2016	Highlander
2012-2016	Prius	2013-2016	Tundra
2015-2016	Sienna	2013-2016	Avalon HV
2016	Mirai	2013-2014	RAV4 EV
2013-2016	Land Cruiser	2012-2016	Prius V
2012-2016	4Runner	2013-2016	Sequoia
2016	RAV4 HV	2013-2016	Avalon
2013-2016	RAV4	2013-2016	Venza
2012-2015	Prius PHV	2012-2016	Tacoma
2012-2016	Prius C	2013-2016	Highlander HV
2012-2016	Camry HV	2012-2016	Corolla

CONDITION

iPhone text messages do not appear on multimedia display.

RECOMMENDATIONS

Follow these steps if iPhone text messages are not shown on the multimedia display.

- After the initial pairing is completed, and if applicable to your multimedia system, enable messaging features by accessing the Phone's Bluetooth menu.
- First, select the "Information" symbol to the right of the "Connected" system and turn on "Show Notifications".
- Then, disconnect/reconnect the phone using the multimedia System's controls.

For iPhones running IOS 8 or later

- On the iPhone go to "Settings".
- Select "Notifications" under "Settings".
- Then choose "Messages".
- Ensure that the either "Banners" or "Alerts" is selected and style is not set to "None".
- Finally, verify that "Allow Notification" and "Show on Lock Screen" are enabled.

LINK REFERENCES

This Tech Tip does not contain any link references