

1 02 03-15



Service Information Bulletin

SUBJECT	DATE
Oil Filter Stand Pipe	February 2015

Additions, Revisions, or Updates

Publication Number / Title	Platform	Section Title	Change
DDC-SVC-MAN-0081	DD Platform	Oil Filter Stand Pipe	This is a new section.
DDC-SVC-MAN-0181	EuroIV DD Platform		




13400 Outer Drive, West, Detroit, Michigan 48239-4001
 Telephone: 313-592-5000
www.demanddetroit.com

2 Oil Filter Stand Pipe Inspection

Inspect as follows:

1. Inspect the oil filter stand pipe for cracks or damage.
2. Ensure the oil bypass valve (1) is not broken or missing.

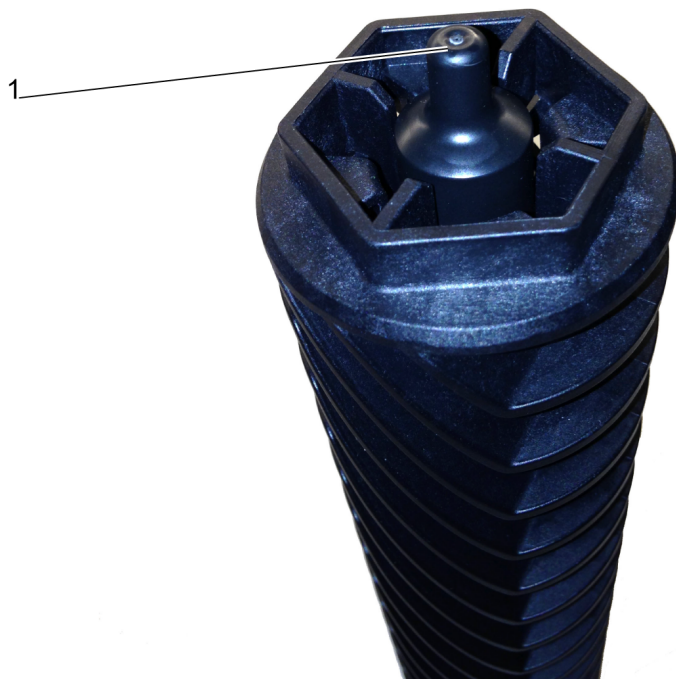

d180042

NOTE: If the stand pipe or bypass valve are broken, all parts must be recovered. If they are not found with the filter removed, follow the instructions below.

3. Remove the oil pan drain plug and drain the engine oil. Discard oil drain plug O-ring.
4. Remove the oil filter stand pipe. Refer to section "Removal of the Oil Filter Stand Pipe".
5. Remove the oil coolant module. Refer to section "Removal of the Oil Coolant Module".
6. Thoroughly flush the oil coolant module to ensure no plastic debris is present.
7. Reinstall the oil coolant module. Refer to section "Installation of the Oil Coolant Module".
8. Install the new oil filter stand pipe. Refer to section "Installation of the Oil Filter Stand Pipe".
9. Refill the engine with new oil. Refer to section "How to Replace the Lubricating Oil and Oil Filter".