

**SUBJECT**

Adjustment of the HUD is only possible in Ignition Terminal Status ‘Driving’

MODEL

G12 (7 Series Sedan)

SITUATION

The Head Up Display (HUD) can only be adjusted when the vehicle ignition is in ‘Driving’ Terminal status.

INFORMATION

The HUD can be adjusted by the customer for some options

- Height on the windshield
- Displayed information via the CID

Note: These adjustments should only be made while the vehicle is stationary (in Park) with the engine running.

The ability to make adjustments to the HUD display can only be done when the ignition terminal status is set to ‘Driving’.

When the ignition terminal status is set to ‘Residing’ the HUD will briefly come on when operating the Multifunction Steering Wheel (MFL) for items such as radio station selection or volume adjustment. Even though the HUD is briefly illuminated you don’t have the ability to adjust the HUD with the ignition in terminal status ‘Residing’.

The HUD settings in the CID will be grayed out if the:

- HUD image is faded out on the windshield
- Ignition terminal status is ‘Residing’

The G12 vehicle has three possible ignition statuses:

- Parking (Asleep)
- Residing (Awake)
- Driving (Ready)

For information on the new ignition terminal statuses please reference:

Training Manual **ST1501 G12 Complete Vehicle.**

ISTA/D – FUB-HIL-HI-610017-K15-Terminal Control, Parking-Residing-Driving.

This Functional Description can be found under the path: Troubleshooting, Function Structure, Powertrain, Terminal Control

WARRANTY INFORMATION

Not applicable.

[Copyright ©2015 BMW of North America, Inc.]