



2004 Scheduled Maintenance Intervals

Miles (in thousands)	5/25/45/65/85/105	15/55/95	35/75
(ilometers (in thousands)	8/40/70/100/130/160	25/85/145	55/115
Engine Oil – change oil and replace filter	•	•	•
Niper/Washer/Headlight Washer – check adjustment and function, add fluid if necessary	•	•	•
Fires and Spare – check for wear and damage, check pressure	•		
 - check for wear and damage, check pressure and renewal date of tire set (where applicable) 		•	•
Fires – rotate	SK only		
Service Reminder Display – reset	•	•	•
Brake System – check for damage, leaks, pad thickness, fluid level – check thickness of pads and brake fluid level	•	•	•
Cooling System – check level, add if necessary		•	
Exhaust System – check for damage, leaks		•	0
Engine On-Board Diagnostics – check fault memory		•	
Engine Compartment – check for leaks		•	0
Battery – check electrolyte level and add if necessary		•	•
Dust and Pollen Filter – replace		•	•
Automatic Transmission and Final Drive – check for leaks		•	•
Manual Transmission and Final Drive - check for leaks		•	0
DSG (direct shift gearbox) – change oil and replace filter element			TT 3.2L only
Haldex Clutch - change oil		■ TT only	— 11 5.2E offity
- change oil and filter		- 11 only	■ TT only
Sunroof – clean quide rails and lubricate rails with grease spray		•	• Tronty
Front Sunroof Drains (where applicable) – open sunroof to check front water drain			
and clean if necessary (U.S. only)			
Plenum Panel – remove cover to plenum panel to check water drains and clean if necessary (U.S. only)			 A4, A4 Avant, A4 Cabriolet, S4, S4 Avant, S4 Cabriolet, A6 and A8
Front Axle – check dust seals on ball joints and tie rod ends		•	•
Lights – check all lights, check headlight adjustment		•	•
Drive Shaft Boots – check		•	•
Doors – lubricate doors, check straps		•	•
Spark Plugs – replace at 35,000 miles or 3 years, whichever occurs first. Then, every 40,000 miles or 3 years, whichever occurs first.			35K only: except Allroad 4.2, 54 and A8
 replace at 55,000 miles or 6 years, whichever occurs first. Then, every 60,000 miles or 6 years, whichever occurs first. 		55K only: Allroad 4.2, S4 and A8	
– replace at 75,000 miles			 75K only: except Allroad 4.2, S4 and A8
Continuously Variable Transmission (multitronic) – change ATF			•
Power Steering Fluid – check, add if necessary			•
Air Cleaner – clean housing, replace filter element		55K only: A4 and A8	Except A4 and A8
Ribbed V Belt – check condition			75K only: 3.2L VR6 and 3.0L V6
– replace			75K only: except 3.2L VR6 and 3.0L V6
Snow Screen for Air Cleaner – clean		A4 only	A4 only
Road Test – check braking, kick-down, steering, electrical, heating and ventilation systems, air conditioning, shift lock operation and power accessories		•	•
Rear Lid Hinges – lubricate		A8 only	A8 only
Timing Belt – replace			75K only: all models except 3.0L engines and TT 3.2L
Timing Belt and Timing Belt Tensioning System – replace			75K only: 2.7L turbo
Brake Fluid – replace every 2 years regardless of mileage.			

Brake Fluid – replace every 2 years regardless of mileage.

Cloth Top – check function and rollover protection every 2 years regardless of mileage (Audi A4 Cabriolet only).

Audi of America, Inc. believes the information and specifications to be correct at the time of printing. Specifications, maintenance intervals, standard features and options subject to change without notice.