

BRAKE Indicator Blinking

AFFECTED VEHICLES

2016 Civic

We're getting reports of the BRAKE indicator blinking after turning the ignition to OFF and applying the electric parking brake. There may also be a DTC U3000-49 (ECU internal circuit malfunction) being set. When the BRAKE indicator blinks, it means there's a problem with the electric parking brake system and the parking brake may have not properly applied.

We're currently reviewing this concern and plan a software update. Until it's available, we have a simple workaround. Just apply the electric parking brake before turning the ignition to OFF. On A/T models, make sure the gear selector is in Park before leaving the vehicle. On M/T models, make sure the electric parking brake is engaged. When it's properly engaged, the BRAKE indicator will be on steady.