

# D/C Cut Fuse Installation During PDS

**Service Category** General

**Section** Pre-Delivery Service

**Market** USA

Lexus Supports  
ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2017	RC200T, RC300, RC350	

## Introduction

To minimize battery discharge during transportation and storage, the D/C Cut Fuse has been removed at the assembly plant and temporarily stored in the blank space of the relay block in the engine compartment.

During Pre-Delivery Service (PDS), reinstall the D/C Cut Fuse into its original location.

## Warranty Information


OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	—	—	—	—

## D/C Cut Fuse Installation During PDS

### Installation Procedure

Remove the D/C Cut Fuse from the blank space of the relay block in the engine compartment and install it in the location shown during Pre-Delivery Service (PDS).

**Figure 1.**

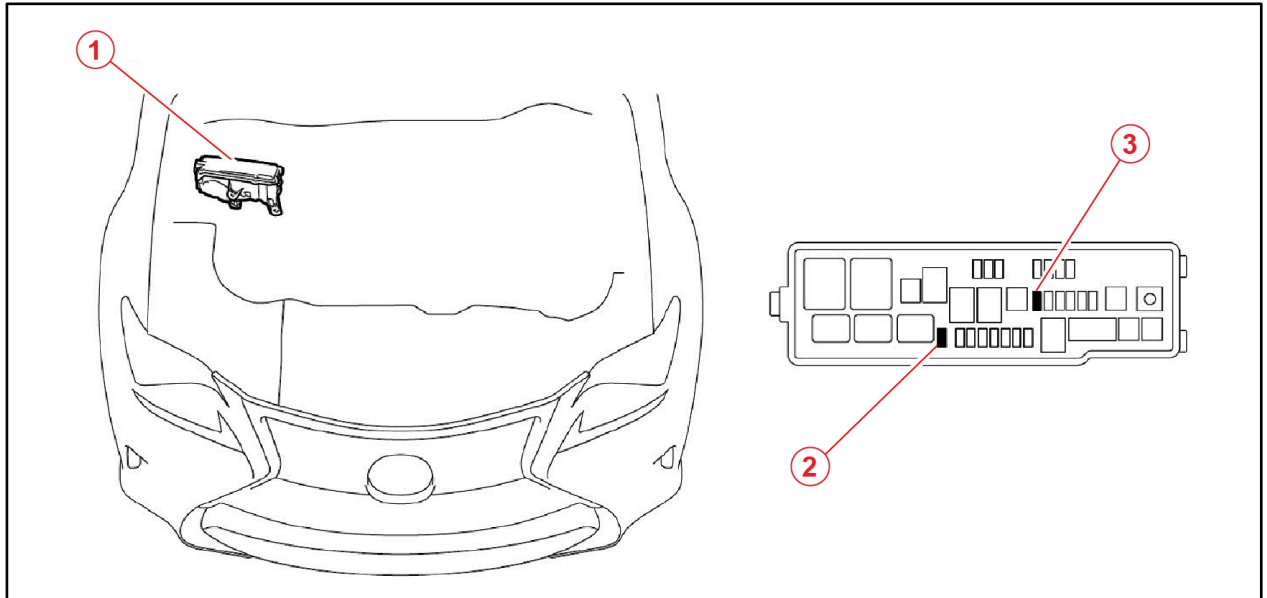

<b>1</b>	Relay Block
<b>2</b>	Remove This D/C Cut Fuse

<b>3</b>	Install D/C Cut Fuse Here (Original Location)
----------	---

**NOTE**

- Removing the D/C Cut Fuse cuts OFF power sources relating to the DOME and MPX-B.
- While the vehicle is stored at the dealership, disconnect the negative (-) battery terminal to prevent battery discharge. Refer to Service Bulletin No. [L-SB-0023-16](#), "Battery Maintenance During PDS," for battery maintenance information.