November 12, 2016

ACURA

05219 Version 1

2014–15 RLX: Judder from the Torque Converter Lock-Up Clutch

AFFECTED VEHICLES

Year	Model	Trim	VIN Range
2014–15	RLX	ALL	ALL

BACKGROUND

A judder from the torque converter lock-up clutch may be felt while driving between 20 and 60 mph. The problem is typically diagnosed as a bad torque converter. American Honda investigated the judder and found that the torque converter was not causing the judder and the transmission is not damaged by this judder.

The judder was caused by deteriorated transmission fluid. The transmission fluid deteriorates quicker than expected when it is exposed to intermittent high heat loads under specific driving conditions. A software update is available to maintain the transmission fluid temperature within the desirable range under all driving conditions and eliminate the potential for this judder.

There are two bulletins referring to this subject:

- 16-065 2014–15 RLX: Judder from the Torque Converter Lock-Up Clutch. Do this bulletin first to apply the software, and flush the transmission as indicated in the REPAIR PROCEDURE.
- 16-066 2014–15 RLX: Judder from the Torque Converter Lock-Up Clutch After Software Update. Some vehicles
 based on how they are driven may still experience ATF deterioration after updating the PGM-FI software. In these
 cases, do the inspection and, if necessary, flush the transmission as indicated in the REPAIR PROCEDURE.

CORRECTIVE ACTION

Check if the software has been updated. **If the software has not been updated**, take an automatic transmission snapshot, review the data, and confirm that the judder is coming from the torque converter. If the snapshot indicates the judder is coming from the torque converter, update the PGM-FI software, then flush the transmission as indicated in the REPAIR PROCEDURE.

PARTS INFORMATION

Part Name	Part Number	Quantity
Drain Plug Washer (18 mm)	90471-PX4-000	1
ATF Fill Sealing Washer (24 mm)	90441-PK4-000	1

REQUIRED MATERIALS

Part Name	Part Number	Quantity	
Acura ATF DW-1	08200-9008A	10	

CLIENT INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by "do-it-yourselfers," and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Acura automobile dealer.

WARRANTY CLAIM INFORMATION

The warranty is 8 years or 80,000 miles, whichever comes first.

Operation Number	Description	Flat Rate Time	Defect Code	Symptom Code	Template ID	Failed Part Number
1255E4	Update the PGM-FI software.	0.2 hr	03214	03217	16-065N	37805-R9P-A590
А	Flush the ATF.	1.4 hrs				

SOFTWARE INFORMATION

NOTE: Unnecessary or incorrect repairs resulting from a failure to update the i-HDS or MVCI are not covered under warranty.

i-HDS Software Version: 1.001.011 or later

J2534 Software Information:

PC Application Version 1.01.15 or later

Database update **26-OCT-2016**

Before beginning the repair, make sure that both the i-HDS and J2534 software are updated as listed above.

Do only the update listed in this service bulletin.

You cannot apply the updates with the MVCI as a standalone tool. To update the software you must use the MVCI or the DST-i interface in conjunction with the J2534 Rewrite PC application on the i-HDS.

For more information about updating the i-HDS, the MVCI, and vehicle systems, refer to Service Bulletin 01-026, *Updating Control Units/Modules*.

Trim	Software System	Program ID (or later)	Program P/N (or later)
2014–15 RLX Base and Technology	PGM-FI	9PA590	37805-R9P-A590
2014–15 RLX Advance	PGM-FI	9PA690	37805-R9P-A690

INSPECTION PROCEDURE

1. Connect the i-HDS, and go to the **A/T Data List**. Check to see if the software has been updated by comparing the program P/N against the table below.

" 🕐 " 🙀 "	F8	1	"
L 🖓 🚧 🦉	SIMP		
Standalone Mode Mode SnapShot			_
	19UUA9F	53CA012	536 EAT
Full List Manual			
Signal	Val	ue	Units
ehicle Speed	3		MPH
Output Shaft (CounterShaft) Speed	3		МРН
put Shaft (Mainshaft) Speed	3	0	MPH
ngine Speed	16	13	RPM
tput Shaft (CounterShaft) Speed (rpm)	14	58	RPM
out Shaft (Mainshaft) Speed (rpm)	15		RPM
ative TP Sensor	10.	2	%
iensor 1	0.5		V
Sensor 2	1.3		V
Sensor (%)	18	5	%
Sensor A (V)	1.6	19	V
P Sensor B (V)	0.0		V
Sensor (V)	0.4		V
ine Coolant Temperature	208	1.4	۴F
P Sensor (V)	1.4	15	V
nifold Absolute Pressure	4	8	kPa
RO SENSOR (V)	4.0		V
nospheric Pressure	9		kPa
F Temp Sensor (V)	0.5		V
F Temperature	185		۴F
ttery Voltage	13		V
ift Control	46		-
Shift Sol VLV. A	OF		•
T Shift Sol VLV. B	OF		
Shift Sol VLV. C	0		0
ne Pressure Sol VLV. A	OF		•
ift Lock Solenoid	OF		
R	9		%
EAR RATIO	4.0		
SHIFT MAP NUMBER	4		
			0.0

• If the program P/N is listed below (or later), the software has been updated. Go to service bulletin 16-066, 2014–15 RLX: Judder from the Torque Converter Lock-Up Clutch After Software Update.

Program P/N (or later)
37805-R9P-A590
37805-R9P-A690

- If the program P/N is not listed, the software has not been updated. Go to step 2.
- 2. Take an automatic transmission snapshot and forward it to Tech Line using the RO number. For more information about capturing and interpreting the data, refer to the job aid *Torque Converter Clutch Shudder and Vibration* and the *Tech2Tech*® video "Interpreting Torque Converter Judder Snapshot Data."
 - If the snapshot indicates there is a judder, go to REPAIR PROCEDURE.
 - If the snapshot does not indicate a judder, this bulletin does not apply. Continue with normal troubleshooting.
 NOTE: You do not need to contact Tech Line after sending the snapshot. However, if you do not send a snapshot, your claim may be subject to debit.

REPAIR PROCEDURE

NOTE:

- You can't update the vehicle using the MVCI as a standalone tool.
- **Do not** use the MongoosePro VCI tool.
- Make sure the 12-volt battery is fully charged before starting an update.
- Connect a fully charged jumper battery to the vehicle, and leave it connected during the entire procedure to maintain steady voltage.
- Never turn the ignition to OFF or ACCESSORY during the update. If there is a problem with the update, leave the ignition turned to ON.
- To prevent VSA modulator-control unit damage, do not operate anything electrical (headlights, audio system, brakes, A/C, power windows, door locks, etc.) during the update.
- If you see the following Error Display, check that you are using the correct tool (MVCI or DST-i) with the i-HDS.

		Error Display	
Error 50 DATA LINK COMMUNICA Make sure correct VCI de Make sure that the ignitio Press ENTER.	vice is selected in the		
System :			
Current Program ID :			
Program ID :			
Model :			
Update Description :			
		Print	Next

To change this, click on either of the **SETTING** selection buttons at the bottom of the J2534 initial screens as shown.



1. Update the PGM-FI software by selecting **the i-HDS Disagnostic System** icon. Refer to Service Bulletin 01-026, *Updating Control Units/ Modules*.

NOTE: Do not use the **Rewrite** icon on your desktop.



2. Select J2534 Rewrite.

Connect to the Vehicle	Stored Data Playback	X Settings
Related applications	Immobilizer Setup Tool	2534 Rewrite

3. Confirm the software is the same **or later** as listed in SOFTWARE INFORMATION.

Honda J2534 Pass Thru EC	CU Reprogramming Ver. 1.0.1.15					
	HONDA The Power of Dreams					
	Honda ECU Reprogramming					
PC Application version:1.0.1.15 Database Update :26-OCT-2016 Calibration Files :1764 NoticeDB version:26-OCT-2016						
	WARNING CM Updates across any type of wireless connection between the laptop and the interface device. ess connection is disrupted during CM Update, permanent damage to the ECU is possible. Always perform CM Updates using the cable of the interface device.					
	E: American Honda Motor Co., Inc. urges end users to always use the latest production release of the J2534 Honda ming software. Using the latest version of the software is the best way to ensure successful reprogramming of odules.					
Close	Help SETTING Error Display Start					

4. Select **Start**, then follow the screen prompts.

NOTE:

- Don't enter a bulletin number.
- If you see a message that the software has been already updated or that no update is available, check the **A/T data list**. The header should indicate one of the following numbers (or later).



• If the program part numbers do not match those listed above, the i-HDS software needs to be reinstalled. Contact the Special Tools Hotline at **800-346-6327** for assistance.



5. Go to the ATF Flush Procedure.

ATF Flush Procedure

NOTE: The term "flushing" refers to repeatedly draining and filling the transmission with Acura Genuine ATF-DW1. Other aftermarket flush systems are available, but American Honda strongly recommends that you avoid using them on any Acura vehicles.

- 1. Start the engine. Hold the engine speed at 3,000 rpm without load (in Park or Neutral) until the radiator fan comes on, then let it idle.
- 2. Position the vehicle on a lift, and turn off the engine.
- 3. Remove the ATF filler bolt and sealing washer.
- 4. Raise the vehicle, and make sure it is securely supported.
- 5. Remove the drain plug, and drain the ATF.
- 6. Install the drain plug and original washer, and torque it to 49 N·m (36 lb-ft).
- 7. Lower the vehicle, and fill the transmission with **3.3 US qts (3.1 L)** of ATF-DW1 through the filler hole. NOTE: Do not use non-Acura ATF because it can affect shift quality.
- 8. Install the ATF filler bolt and original sealing washer, and torque it to 44 N'm (32 lb-ft).
- 9. Check that the fluid is filled to the proper level.
- 10. Raise the vehicle, and make sure it is securely supported.
- 11. Start the engine.
- 12. Press the VSA Off button.
- 13. Press the brake pedal, and shift to Drive.
- 14. Release the brake pedal. Press the accelerator pedal, and bring the speedometer up to 50 mph. Make sure the transmission shifts through the first three lower gears and into 4th gear and the torque converter is locking up.
- 15. Apply the brakes to stop the front wheels.
- 16. Shift to Reverse, then to Neutral.
- 17. Repeat the shifting procedure (steps 13 through 16) four more times.
- 18. Turn off the engine.
- 19. Repeat the above drain, fill, and shifting procedure (steps 2 through 18) one more time.
- 20. After the second refill and drive cycle, drain the transmission.
- 21. Install the drain bolt with a new washer, and torque to 49 N'm (36 lb-ft).
- 22. Fill the transmission with 3.3 US qts (3.1 L) of ATF-DW1.

Automatic Transmission Fluid Capacity

AWD: 3.3 US qts (3.1 L) at change

2WD: 3.3 US qts (3.1 L) at change

NOTE: Do not use non-Acura ATF because it can affect shift quality.

- 23. Install the ATF filler bolt with a new sealing washer, and torque the bolt to 44 N·m (32 lb-ft).
- 24. Clear any DTCs that were set while driving on the lift, and confirm the judder is gone.
- 25. If the Maintenance Minder did not indicate the ATF needed replacement, reset the Maintenance Minder with the i-HDS. For more information about resetting individual maintenance items, refer to the service information. If the Maintenance Minder indicated the ATF needed replacement and a full service was done, reset the maintenance Minder with the multi-information display.