

How to override and view the camera manually on the Kenwood DNX691HD

1. On the main menu of the radio please find and press **“SETUP”**
2. Press and select **“SYSTEMS”**
3. Press and select **“USER INTERFACE”**
4. Scroll down until you find **“TEL KEY LONGER THAT 1 SEC”**
5. Press and select **“R-CAM”**
6. Press the main radio **“MENU BUTTON”** to return to the front screen.
7. Under the volume knob you will find the **“TEL”** button, hold for 1 second and this will override the camera triggers.
Allowing you to view the camera constantly.
8. Once the set-up is complete, you can activate the rear view camera at anytime by pushing and holding the **“TEL”** button for 3 seconds.