

Combination Meter - Trip Meter Intermittently Resets

Service Category Vehicle Interior

Section Meter/Gauge/Display

Market USA

Toyota Supports
 ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2016	Tacoma	

Introduction

Some 2016 model year Tacoma vehicles may exhibit a condition where the trip meters may intermittently reset. Follow the Repair Procedure in this bulletin to address this condition.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
830011	R & R Combination Meter Assembly	0.4	83800-04##0	87	74

APPLICABLE WARRANTY

- This repair is covered under the Toyota Basic Warranty. This warranty is in effect for 36 months or 36,000 miles, whichever occurs first, from the vehicle's in-service date.
- Warranty application is limited to occurrence of the specified condition described in this bulletin.

Combination Meter - Trip Meter Intermittently Resets

Parts Information

PART NUMBER	PART NAME	QTY
83800-04F00-RP	Meter Assy, Combination	1
83800-04J70-RP		
83800-04J90-RP		
83800-04K00-RP		
83800-04K30-RP		
83800-04K90-RP		
83800-04L30-RP		

NOTE

- The combination meter computer contains the vehicle odometer memory. This component should be ordered directly from the vendor (Continental) with the correct mileage programmed.
- Please refer to PANT Bulletin 2016-005 REV1: "[Digital Odometer Replacement Program Expansion](#)", for additional information.

Repair Procedure

1. Did the trip meter reset to 0 by itself?
 - **YES** — Continue to step 2.
 - **NO** — This bulletin does NOT apply. Continue diagnosis using the applicable Repair Manual.
2. Disconnect the negative (–) battery terminal.
3. Remove the Combination Meter Assembly.
Refer to the Technical Information System (TIS), applicable model and model year Repair Manual:
 - 2016 Tacoma:
Vehicle Interior – Meter/Gauge/Display – “Meter: Combination Meter: [Removal](#)”
4. Reinstall the updated Combination Meter Assembly.
Refer to TIS, applicable model and model year Repair Manual:
 - 2016 Tacoma:
Vehicle Interior – Meter/Gauge/Display – “Meter: Combination Meter: [Installation](#)”
5. Reconnect the negative (–) battery terminal.
6. Confirm normal operation of the combination meter.

Combination Meter - Trip Meter Intermittently Resets

Repair Procedure (Continued)

7. Initialize the Tire Pressure Warning System.

Refer to TIS, applicable model and model year Repair Manual:

- 2016 Tacoma:

Engine/Hybrid System – Meter/Gauge/Display – “Tire and Wheel: Tire Pressure Warning System: [Initialization](#)”