

SS 1023290 DT12 Proper Shift Controller Installation



Summary: DT12 Transmissions, Ensuring Shift Controller is Properly Installed on Shift Actuator

:smileyinfo::smileyinfo::smileyinfo::smileyinfo::smileyinfo::smileyinfo::smileyinfo::smileyinfo:	:smileyinfo::smileyinfo::smileyinfo::smileyinfo::smileyinfo::smileyinfo::smileyinfo::smileyinfo:
Make sure you are following Section 2.17.2 - Installation of the Shift Controller in the DT12 Transmissions Manual found in PSL. The transmission will need to be removed to facilitate replacement of the shift controller.	https://www.dodge.com
Step 2 of the installation instructions in PSL describe how to hang the shift controller on the shift actuator. These photos provide some visual feedback.	

It is very important to make sure the shift controller is engaged on the shift actuator.

0 Kudos